



7-INCH AUDIO/VIDEO RECEIVER

iLX-W650E



androidauto™



- OWNER'S MANUAL
Please read before using this equipment.

ALPINE ELECTRONICS MARKETING, INC.

1-7, Yukigaya-Otsukamachi, Ota-ku,
Tokyo 145-0067, JAPAN
Phone: 03-5499-4531

ALPINE ELECTRONICS OF AMERICA, INC.

1500 Atlantic Blvd,
Auburn Hills, Michigan 48326 U.S.A.
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LIMITED

161-165 Princes Highway, Hallam
Victoria 3803, Australia
Phone 03-8787-1200

ALPINE ELECTRONICS GmbH

Ohmstraße 4
85716 Unterschleißheim, Germany
Phone: 089-32 42 640

ALPINE ELECTRONICS OF U.K., LTD.

Alpine House
Fletchamstead Highway, Coventry CV4 9TW, U.K.
www.alpine.co.uk

ALPINE ELECTRONICS FRANCE S.A.R.L.

184 allée des Erables
CS 52016 – Villepinte
95 945 Roissy CDG cedex
FRANCE
Phone : + 33(0)1 48 63 89 89

ALPINE ITALIA S.p.A.

Viale Cristoforo Colombo 8,
20090 Trezzano sul Naviglio MI, Italy
Phone +39 02 484781

ALPINE ELECTRONICS DE ESPAÑA, S.A.

Portal de Gamarra 36, Pabellón, 32
01013 Vitoria (Alava)-APDO 133, Spain
Phone 945-283588

Contents

Operating Instructions

WARNING

Points to Observe for Safe Usage	4
WARNING	4
CAUTION	5
NOTICE	5

Getting Started

Location of Controls	7
Turning Power On or Off	7
Turning the System On	7
Adjusting the Volume	7
Lowering Volume Quickly	7
Touch Screen Operation	8
About the HOME Screen	8
About the Indicator Display	9
How to Input Characters and Numbers (Keypad)	9

Setup

Setup Operation	10
-----------------------	----

Sound Setup

Simple Sound Settings	10
Setting the Fader/Balance	10
Adjusting the Bass/Middle/Treble	11
Setting an Equalizer	11
Setting the Subwoofer	11
Advanced sound settings	11
Adjusting the Crossover Settings (X-Over)	12
Adjusting the Parametric Equalizer Curve (P-EQ)	12
Adjusting the Time Correction (TCR)	13
Setting the Media Xpander (MX)	13
Setting Defeat	13
About the Crossover	14
About Time Correction	14

Volume Setup

Phone Volume Setup	15
Adjusting the Ring Tone Level	15
Adjusting the Caller Level	15
Adjusting the Microphone Level	15
Volume Setup except for Phones (Other)	16
Volume Setting	16

System Setup

Clock Setup	16
Screen/Lighting Customize (Dimmer)	16
Setting the Brightness of the Backlighting (Dimmer)	17
Adjusting the Minimum Level of Backlight	17
Adjusting the Dimmer of Button Lighting at Night	17
Language Setup	17
Reset	17

Connectivity Setup

Bluetooth Setup

Device Setup	18
Pairing the Bluetooth Device	18
Setting the Bluetooth Device	18
Deleting a Bluetooth Device from the list	18
Displaying Bluetooth Information	19
Searching for a Bluetooth Device	19
Auto Connection	19
Downloading the Phonebook	19

Camera Setup

Camera Primary and Secondary Setting	19
Camera Picture Quality Setup	19
Setting the Camera Signal Input	20
Turning the Rear Camera Guide On/Off	20
Adjusting the Rear Camera Guide	20

Information

Apple CarPlay (Optional)

Access to Apple CarPlay	22
-------------------------------	----

Android Auto (Optional)

What is Android Auto	22
Activate Android Auto	22

Radio

Radio Basic Operation

Listening to the Radio	23
Presetting Stations Manually	23
Presetting Stations Automatically	23
Tuning to Preset Station	23
Scanning Stations	23
Scanning Preset Stations	23

USB Flash drive (Optional)

Playback	25
Fast-forwarding/Fast-reversing (USB Video)	25
Repeat Play (USB Audio or USB Video)	25
Shuffle Play (USB Audio or USB Video)	25
Searching for a Desired Song/Video/Photo	25
Slide Show (USB Photo)	25
About USB Video format	25

iPod mode on iPhone (Optional)

Playback	26
Searching for a Music File	27
Repeat Play	27
Shuffle Play	27

Bluetooth Operation

Setup Before Using	28
About Bluetooth	28
About the Hands-free Phone	28
Before Using Bluetooth	28

Hands-free Phone Control

Answering a Call	29
Hanging up the Telephone	29
Calling	29
Making a phone call using the Phone Menu	29
Using Voice Recognition function	30
Using Siri	30
Voice Dial Function	31
Phone Operation Screen	31
Adjusting the Speech Volume	31
Changing the Voice Output	31
DTMF (Touch-Tone) Function	31
Phone Book Function	32

Synchronizing the Phone Book	32
Searching in the Phone Book	32

Bluetooth Audio

Playback	33
Repeat Play	33
Shuffle Play	33

Camera Operation (Optional)

Camera Operation	34
Displaying the Camera Image from the Menu screen	34
Displaying the rear view video while the car is in reverse	34
About the Rear Camera Guide	34

Information

Product Software Update	36
About the Supported Formats	36
About MP3/WMA/AAC/FLAC/WAV	36
In Case of Difficulty	38
If this Message Appears	39
Specifications	40

Installation and Connections

WARNING	41
CAUTION	41
Precautions	41
Accessory List	42
Installation	42
Caution concerning the installation location	42
Mounting the Microphone	42
Installation example using the Original Mounting Bracket	42
Connections	43
If an ACC power supply is not available	45
System Example	46

Operating Instructions

WARNING

Points to Observe for Safe Usage

- Read this manual carefully before using this disc and the system components. They contain instructions on how to use this product in a safe and effective manner. Alpine cannot be responsible for problems resulting from failure to observe the instructions in this manual.
- This manual uses various pictorial displays to show you how to use this product safely and to alert you to potential dangers resulting from improper connections and operation. Following are the meanings of these pictorial displays. It is important to fully understand the meanings of these pictorial displays in order to use this manual and the system properly.



WARNING

- Operation of the system while driving is dangerous. Users should stop vehicle before operating the software.
- Road conditions and regulations take precedence over information contained on the map display: observe actual traffic restrictions and circumstances while driving.
- This software is designed for use exclusively in the unit. It cannot and may not be used in conjunction with other hardware.



WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

INSTALL THE PRODUCT CORRECTLY SO THAT THE DRIVER CANNOT WATCH TV/VIDEO UNLESS THE VEHICLE IS STOPPED AND THE EMERGENCY BRAKE IS APPLIED.

It is dangerous for the driver to watch TV/Video while driving a vehicle. Installing this product incorrectly enables the driver to watch TV/Video while driving. This may cause a distraction, preventing the driver from looking ahead, thus causing an accident. The driver or other people could be severely injured.

DO NOT WATCH VIDEO WHILE DRIVING.

Watching the video may distract the driver from looking ahead of the vehicle and cause an accident.

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING.

Excessive volume levels that obscure sounds such as emergency vehicle sirens or road warning signals (train crossings, etc.) can be dangerous and may result in an accident. LISTENING AT LOUD VOLUME LEVELS IN A CAR MAY ALSO CAUSE HEARING DAMAGE.

MINIMIZE DISPLAY VIEWING WHILE DRIVING.

Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electric shock.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

KEEP SMALL OBJECTS SUCH AS SCREWS OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.

Failure to do so may result in fire or electric shock.

DO NOT BLOCK VENTS OR RADIATOR PANELS.

Doing so may cause heat to build up inside and may result in fire.

USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.

Use for other than its designed application may result in fire, electric shock or other injury.

MAKE THE CORRECT CONNECTIONS.

Failure to make the proper connections may result in fire or product damage.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.

Failure to do so may result in electric shock or injury due to electrical shorts.

DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS.

Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, gear lever, brake pedals, etc. can be extremely hazardous.

DO NOT SPLICE INTO ELECTRICAL CABLES.

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

DO NOT INSTALL IN LOCATIONS WHICH MIGHT HINDER VEHICLE OPERATION, SUCH AS THE STEERING WHEEL OR SHIFT LEVER.

Doing so may obstruct forward vision or hamper movement etc. and results in serious accident.

 CAUTION
This symbol means important instructions. Failure to heed them can result in injury or material property damage.

HALT USE IMMEDIATELY IF A PROBLEM APPEARS.

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Center for repairing.

HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.

DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

 **NOTICE**

Product Cleaning

Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Temperature

Be sure the temperature inside the vehicle is between +45°C (+113°F) and 0°C (+32°F) before turning your unit on.

Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

Protecting the USB connector

- Only an iPhone or USB flash drive can be connected to the USB connector on this unit. Correct performance using other USB products cannot be guaranteed.
- If the USB connector is used, be sure to use only the supplied connector cable with the unit. A USB hub is not supported.
- Depending on the connected USB flash drive, the unit may not function or some functions may not be performed.
- The audio file format that can be played back on the unit is MP3/WMA/AAC/FLAC.
- Artist/song name, etc., can be displayed. Certain, special characters may not be correctly displayed.



CAUTION


Alpine accepts no responsibility for lost data, etc., even if data, etc., is lost while using this product.

On Handling USB Flash drive

- This unit can control a memory storage device that supports the USB Mass Storage Class (MSC) protocol. Playable audio file formats are MP3, WMA, AAC and FLAC.
 - USB Flash drive function is not guaranteed. Use USB flash drive according to the terms of agreement. Read the USB flash drive Owner's Manual thoroughly.
 - Avoid usage or storage in the following locations:
 - Anywhere in the car exposed to direct sunlight or high temperatures.
 - Anywhere the possibility of high humidity or corrosive substances are present.
 - Fix the USB flash drive in a location where driver operation will not be hindered.
 - USB Flash drive may not function correctly at high or low temperature.
 - Use only certified USB flash drive. Note that even certified USB flash drive, may not function correctly depending on its type or state.
 - Depending on the settings of the USB flash drive type, memory state or encoding software, the unit may not play back or display properly.
 - USB Flash drive may take time to start playback. If there is a particular file other than audio in the USB flash drive, it may take considerable time before the file is played back or searched.
 - The unit can play back "mp3," "wma" or "m4a" file extensions.
 - Do not add the above extensions to a file other than audio data. This non-audio data will not be recognized. The resulting playback may contain noise that can damage speakers and/or amplifiers.
 - It is recommended to back up important data on a personal computer.
 - Do not remove the USB device while playback is in progress. Change SOURCE to something other than USB, then remove the USB device to prevent possible damage to its memory.
- Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.
 - Apple, iPhone, and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
 - Use of the Made for Apple and Works with Apple badges means that an accessory has been designed to connect specifically to the Apple product(s) identified in the Made for Apple badge and to work specifically with the technology identified in the Works with Apple badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
 - Please note that the use of this accessory with an Apple product may affect wireless performance.
 - Use of the Apple CarPlay logo means that a vehicle user interface meets Apple performance standards. Apple is not responsible for the operation of this vehicle or its compliance with safety and regulatory standards. Please note that the use of this product with iPhone may affect wireless performance.
 - Google, Android, Android Auto, Google Play and other marks are trademarks of Google LLC.
 - The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Alpine Electronics, Inc. is under license.
 - MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson. Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generation) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>

Getting Started

Location of Controls

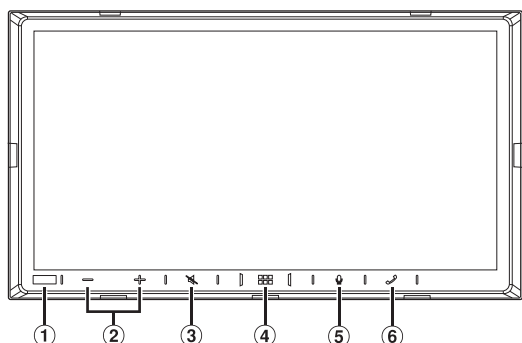

- 1 Dimmer Sensor**
Sense the brightness of the car interior.
- 2 - / + (DOWN/UP) button**
Touch to adjust the volume.
- 3 [MUTE] button**
Touch to activate/deactivate the mute mode.
- 4 [HOME]/(Power Off) button**
Activates the HOME screen.
Touch and hold this button for at least 1 second to turn the power off.
- 5 [SIRI] button**
Depending on the connected smartphone, touch to activate Siri function or voice recognition mode.
- 6 [PHONE] button**
When a Hands-Free Phone is not connected:
The Bluetooth setting screen is displayed.
When a Hands-Free Phone is connected:
The phone number input screen (Keypad) is activated.
Touch and hold the button for at least 2 seconds to redial the most recent incoming call.
During an incoming call:
The phone call is started.
During a call:
The call finishes.

About the button descriptions used in this Owner's Manual

The buttons found on the face of the unit are expressed in bold (e.g. [HOME]). The buttons found on the touch-screen display are shown in bold within brackets, [] (e.g. [X]).

Turning Power On or Off


Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake, before attempting these operations.

- 1 Turn the ignition key to the ACC or ON position.**
The system turns on.
 - When turned on, the system displays the last screen that was displayed before the ignition key was turned off. For example, if the unit is in radio mode when ignition is turned off, it will remain in radio mode when ignition is turned back on.
- 2 Touch and hold the [HOME]/(Power Off) button for at least 1 second to turn the power off.**
 - When the system is used for the first time, the language selection menu is displayed. Select the desired language, and then touch [OK].
 - The unit can be turned on by touching the [HOME] button, [PHONE] button or [SIRI] button.
 - The unit is a precision device. Careful handling of the unit should provide you with years of trouble-free operation.

Turning the System On

When the system is used for the first time, the language selection menu is displayed.

Select a language, and then touch [OK].

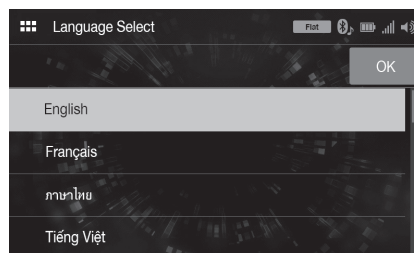

- Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake before attempting these operations.

Adjusting the Volume

Adjust the volume by touching -/+.

Volume decreases/increases continuously by touching and holding -/+.

Volume: 0 - 35

Lowering Volume Quickly

Audio Mute function instantly lowers the volume level to 0.

- 1 Touch the [MUTE] button to activate the MUTE mode.**
The audio level will be 0.
- 2 Touching the [MUTE] button again will bring the audio back to its previous level.**

Touch Screen Operation

You can operate the system by using the touch panel on the screen.

- Be sure to touch the onscreen button lightly with the pad of your finger to avoid scratching the display.


Touch a button or list item on the screen lightly.



- If you touch a button and there is no reaction, remove your finger.
- Onscreen buttons that cannot be operated are dimmed.

About the HOME Screen

In the HOME screen, you can select the audio source and perform various setups or operations on the unit.

Touch the  (HOME) button.

The HOME screen is displayed.

HOME screen example



Radio	Displays the Radio main screen (page 23).
USB	You can play back music files (MP3/WMA/AAC/FLAC/WAV), video files (MP4/AVI/WMV/MOV) and photo files (JPG/PNG/BMP) stored in a USB flash drive (page 24). <ul style="list-style-type: none"> • If a USB flash drive is not connected, this widget is not available.
iPod	Displays the iPod main screen (page 26). <ul style="list-style-type: none"> • If an iPhone is not connected, this widget is not available.
Connectivity	You can use Apple CarPlay (page 22) or Android Auto (page 22). <ul style="list-style-type: none"> • If an iPhone 5s or later compatible with the Apple CarPlay function or a smartphone installed with the Android Auto App is not connected, this widget is not available. • When Apple CarPlay or Android Auto is available, the widget changes to [Apple CarPlay] / [Android Auto].
Bluetooth Audio	Displays the Bluetooth audio main screen (page 32).
Camera	Displays camera images (page 34).
Setup	Displays the Setup screen (page 10).

About the Indicator Display

The Indicator Bar at the top of the screen displays various types of information, like the current time.



- ① Indicates the current time.
You can switch between the 12 hour display and 24 hour display options (page 16).
- ② Indicates the selected equalizer (page 11).
- ③ Lights up when connected to a Bluetooth compatible device. (Does not display when connection is set to OFF.)
 - 🔗 (Both): Bluetooth connections to the audio device and Hands Free Phone.
 - 🔗 (Audio): Bluetooth connection to audio device.
 - 🔗 (Hands-free): Bluetooth connection to Hands-Free Phone.
- ④ Indicates the battery level of the connected Bluetooth device.

Battery Level	Level 3	Level 2	Level 1	No Battery
Icon				

This may not be displayed depending on the connected Bluetooth device.


- ⑤ Indicates the signal strength level of the connected Bluetooth compatible device.
Displayed when Bluetooth setting is ON.

0	1	2	3	4	5

- ⑥ Indicates the volume on/off status and shows the volume setting bar.

How to Input Characters and Numbers (Keypad)


The displayed screens and procedures may vary slightly depending on the function used, but the basic input method is the same.

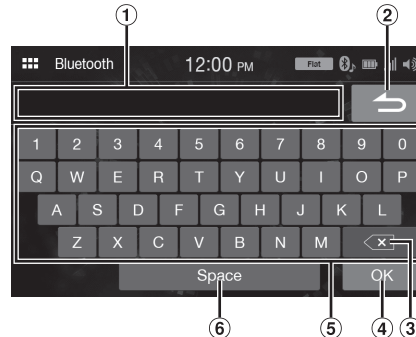

- ① Input screen area.
- ② Cancel
Keypad mode finishes.
- ③ (Delete)
Returns to the previous character and erases it.
Touching here for more than 2 seconds will erase all input characters.
- ④ Input number is confirmed.
- ⑤ Character keypad
- ⑥ Space

Setup


Setup Operation

- 1 Touch the  (HOME) button.
The HOME screen is displayed.



[Setup] button

- 2 Touch [Setup].
The Setup main screen is displayed.

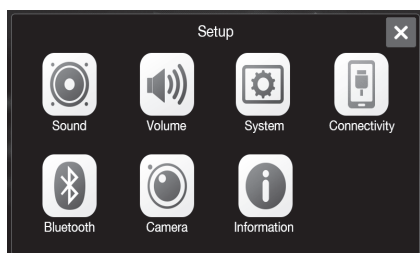

- 3 Touch the required setting icon, then touch the setting item.

Setting items:

Sound: See "Sound Setup" (page 10).
 Volume: See "Volume Setup" (page 15).
 System: See "System Setup" (page 16).
 Connectivity: See "Connectivity Setup" (page 18).
 Bluetooth: See "Bluetooth Setup" (page 18).
 Camera: See "Camera Setup" (page 19).
 Information: See "Information" (page 21).

Sound Setup

[Sound] is selected on the Setup menu screen.

You can set up items related to the sound quality.

Touch [Advanced] or [Simple] to change the setting screen.

<Setting item>

Simple
Fad./Bal. (page 10)
Bass/Treble (page 11)
EQ (page 11)
Sub.W (page 11)
Advanced*
X-Over (page 12)
P-EQ (page 12)
TCR (page 13)
MX (page 13)
Defeat (page 13)

* Touch [>>>] or [<<<] to show further hierarchies.


Simple Sound Settings

[Simple] is selected on the Sound Setup menu screen.

Setting item:

Fad./Bal., Bass/Treble, EQ, Sub.W

Setting the Fader/Balance

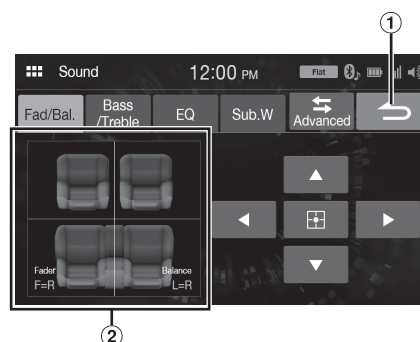

- ① Cancel
Sound setup finishes.
- ② Fader/Balance Image area

Touch the desired point within the image area, or touch [◀], [▲], [▼] or [▶].

Fader:


[10]Front to [10]Rear

Balance:

[10]Left to [10]Right

- To reset to the initial setting (Fader: F=R, Balance: L=R), touch [⊕].

Adjusting the Bass/Middle/Treble

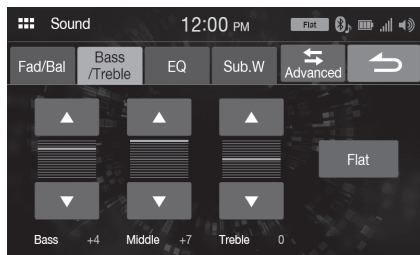

Touch [▲] or [▼] for each item to be adjusted.

Setting item:

Bass, Middle, Treble


Setting contents:

-7 to 7 (Initial setting: 0)

- To reset the initial setting (Bass: 0, Middle: 0, Treble: 0), touch [Flat].
- When the Defeat setting is [On], you cannot perform the set up.

Setting an Equalizer

5 typical equalizer settings are preset at the factory for a variety of musical source material. You can also preset an equalizer by customizing.

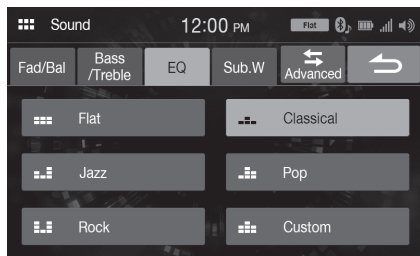

Setting item:


EQ

Setting contents:

Flat (Initial setting), Jazz, Rock, Classical, Pop, Custom

- When the Defeat setting is [On], you cannot perform the set up.
- Only one type can be set.
- When you select [Custom], the P-EQ setting screen is displayed (page 12).
- If you select a content except for [Custom] on this setting, P-EQ setting (page 12) will change P-EQ Setting.

Setting the Subwoofer

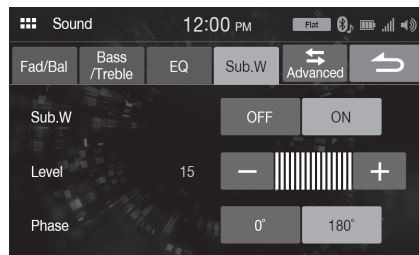

Turning Subwoofer ON/OFF

If an optional subwoofer is connected to the unit, make the following setting.

Setting item:

Sub.W

Setting contents:

Off (Initial setting), On

Adjusting the Subwoofer Level

Setting item:

Level

Setting contents:

0 (Initial setting) to 15

- This setting is only available when "Sub.W" is set to [On].

Setting the Subwoofer Phase

The subwoofer output phase is toggled Subwoofer Normal (0°) or Subwoofer Reverse (180°).

Setting item:

Phase

Setting contents:

0° (Initial setting), 180°

- This setting is only available when "Sub.W" is set to [On].

Advanced sound settings

[Advanced] is selected on the Sound Setup menu screen.

Setting item:


X-Over, P-EQ, TCR, MX, Defeat

Adjusting the Crossover Settings (X-Over)

Before performing the following procedures, see “About the Crossover” (page 14).

Setting item:
X-Over

- 1 Touch **[Channel]** to select the channel.
Each time you touch, the channel switches.

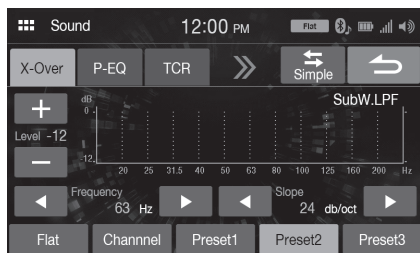

- The channel being adjusted is displayed in red.
Front HPF → Rear HPF → SubW LPF → Front HPF

- 2 Adjust the crossover to your preference.

Selecting the Cut-Off Frequency

Touch **[◀]** or **[▶]** of “Frequency,” and then select the cut-off frequency.

Setting contents:
20 / 25 / 31.5 / 40 / 50 / 63 / 80 (Initial setting) / 100 / 125 / 160 / 200 Hz

Adjusting the Slope

Touch **[◀]** or **[▶]** of “Slope,” and then adjust the HPF or LPF slope.

Setting contents:
0 (Initial setting) / 6 / 12 / 18 / 24 dB/oct.

Adjusting the Level

Touch **[−]** or **[+]** of “Level,” and then adjust the HPF or LPF level.

Setting contents:
−12 to 0 dB (Initial setting: 0)

- 3 Repeat steps 1 to 2 to make adjustment to the other channels.

- 4 To store the adjusted setting value, touch and hold **[Preset 1]**, **[Preset 2]**, or **[Preset 3]** for at least 2 seconds.

- Touch **[Flat]** to initialize all values.
- If the Subwoofer setting is **[Off]**, the Subwoofer setting cannot be edited (page 11).
- While adjusting the X-Over you should consider the frequency response of the connected speakers.

Calling the X-Over adjusted value

Calling the pre-set X-Over adjusted value.

Touch **[Preset 1]**, **[Preset 2]**, or **[Preset 3]** on the X-Over screen.

The setting stored in the Preset will be recalled.

Adjusting the Parametric Equalizer Curve (P-EQ)

Parametric Equalizer (P-EQ) can adjust the center frequency/Q Factor (bandwidth)/level for the front and rear speakers independently. You can adjust only to the approximate frequency zone, but can then compensate by performing advanced correction of the sound.

Setting item:
P-EQ

- When the Defeat setting is **[On]**, you cannot perform the set up.

- 1 Adjust the P-EQ to your preference.



Adjusting the Band

Touch **[Band]** to select the band to be adjusted.

Band1 → Band2 → ... → Band8 → Band9 → Band1

- You can select a band directly by touching the screen.

Adjusting the Frequency

Touch **[◀]** or **[▶]** of “Frequency” to adjust the frequency of the selected band.

Adjustable frequency bands:
20 Hz to 20 kHz (in 1/3 octave steps)

Band1:	20 Hz to 100 Hz (63 Hz)
Band2:	63 Hz to 315 Hz (125 Hz)
Band3:	125 Hz to 500 Hz (250 Hz)
Band4:	250 Hz to 1 kHz (500 Hz)
Band5:	500 Hz to 2 kHz (1 kHz)
Band6:	1 kHz to 4 kHz (2 kHz)
Band7:	2 kHz to 7.2 kHz (4 kHz)
Band8:	5.8 kHz to 12 kHz (8 kHz)
Band9:	9 kHz to 20 kHz (16 kHz)

Adjusting the Level

Touch **[−]** or **[+]** of “Level” to adjust the level of selected band.

Setting contents:
−7 to 7 (Initial setting: 0)

Setting the Bandwidth

Touch **[◀]** or **[▶]** of “Q Factor” to select the bandwidth.

Setting contents:
Narrow / Medium / Wide (Initial setting)

- 2 To adjust another band, repeat step 1, and adjust all bands.

- 3 To store the adjusted setting value, touch and hold **[Preset 1]**, **[Preset 2]**, or **[Preset 3]** for at least 2 seconds.

- Band2 and Band5 are the same as the Bass and Middle controls. For details on setting Bass and Treble, see “Adjusting the Bass/Middle/Treble” (page 11).
- Settings exceeding the frequency of adjacent bands are not available.

- While adjusting the P-EQ, you should consider the frequency response of the connected speakers.
- To reflect the P-EQ setting, set “EQ” to [Custom] (page 11).
- Touch [Flat] to initialize all values.

Calling the P-EQ adjusted value

Calling the pre-set P-EQ adjusted value.

Touch [Preset 1], [Preset 2], or [Preset 3] on the P-EQ screen. The setting stored in the Preset will be recalled.

- Presets can be called on [Custom] of the “EQ” setting (page 11).

Adjusting the Time Correction (TCR)

Before performing the following procedures, see “About Time Correction” (page 14).



Correction mode

Setting item:
TCR

- 1 Touch the Correction mode button to select [ms], [cm] or [inch].
- 2 Touch [–] or [+] for each speaker to adjust the time or distance.
0.0 msec to 9.9 msec (0.1 msec/step)
0.0 cm (0.0 inch) to 336.6 cm (133.7 inch) (3.4 cm/step)
All speaker setting values are adjustable in the range of 15 ms or 510 cm.
- 3 To store the adjusted setting value, touch and hold [Preset 1], [Preset 2], or [Preset 3] for at least 2 seconds.

- Touch [Flat] to set all values to 0.0.
- If the Subwoofer setting is [Off], the Subwoofer setting cannot be edited (page 11).

Calling the Time Correction Value

Calling the pre-set time correction value.

Touch [Preset 1], [Preset 2], or [Preset 3] on the time correction screen.


The setting stored in the Preset will be recalled.

Setting the Media Xpander (MX)

Media Xpander (MX) makes vocals or instruments sound distinct regardless of the music source. The USB Flash drive and iPhone, will be able to reproduce the music clearly even in cars with a lot of road noise.

Setting item:
MX

- 1 Touch [On] of “All MX OFF/ON”.

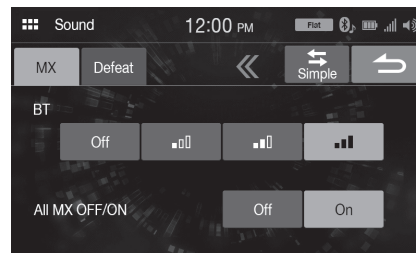

- 2 Touch any of [Off], [], [], [].

- To cancel MX mode, set [Off] in step 1.
- MP3/WMA/AAC can have its own MX setting.
- When the Defeat setting is [On], you cannot perform the set up.
- The MX setting can be performed only when a source is currently selected.

Setting Defeat

If Defeat is [On], the MX and Equalizer setting are turned Off. This disables any settings made for these functions.

Setting item:
Defeat
Setting contents:
Off (Initial setting) / On

About the Crossover

Crossover (X-Over):


This unit is equipped with an active crossover. The crossover limits the frequencies delivered to the outputs. Each channel is controlled independently. Thus, each speaker pair can be driven by the frequencies for which they have been optimally designed.

The crossover adjusts the HPF (high pass filter) or LPF (low pass filter) of each band, and also the slope (how fast the filter rolls off the highs or lows).

Adjustments should be made according to the reproduction characteristics of the speakers. Depending on the speakers, a passive network may not be necessary. If you are unsure about this point, please consult your authorized Alpine dealer.

	Cut-off frequency (1/3 octave steps)		Slope		Level
	HPF	LPF	HPF	LPF	
Subwoofer (LPF)	----	20 Hz - 200 Hz	----	0, 6, 12, 18, 24 dB/oct.	0 to -12 dB
Rear speaker (HPF)	20 Hz - 200 Hz	----	0, 6, 12, 18, 24 dB/oct.	----	0 to -12 dB
Front speaker (HPF)	20 Hz - 200 Hz	----	0, 6, 12, 18, 24 dB/oct.	----	0 to -12 dB

Low range High range

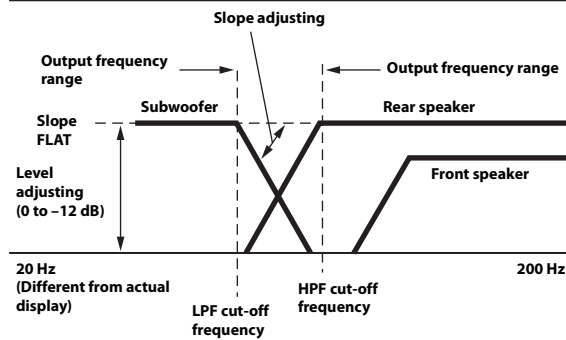

- **HPF (high pass filter):** Cuts the lower frequencies and allows the higher frequencies to pass.
- **LPF (low pass filter):** Cuts the higher frequencies and allows the lower frequencies to pass.
- **Slope:** The level change (in dB) for a frequency change of one octave.
- The higher the slope value, the steeper the slope becomes.
- Adjust the slope to FLAT to bypass the HP or LP filters.
- Do not use a tweeter without the HPF on or set to a low frequency, as it may cause damage to the speaker due to the low frequency content.
- Adjustment should be made according to the recommended crossover frequency of the connected speakers. Determine the recommended crossover frequency of the speakers. Adjusting to a frequency range outside that recommended may cause damage to the speakers. For the recommended crossover frequencies of Alpine speakers, refer to the respective Owner's Manual. We are not responsible for damage or malfunction of speakers caused by using the crossover outside the recommended value.


About Time Correction

The distance between the listener and the speakers in a car vary widely due to the complex speaker placement. This difference in the distances from the speakers to the listener creates a shift in the sounds image and frequency characteristics. This is caused by the time delay between the sound reaching the listener's right versus the left ear.

To correct this, this unit is able to delay the audio signal to the speakers closest to the listener. This effectively creates a perception of increased distance for those speakers. The listener can be placed at an equal distance between the left and right speakers for optimum staging. The adjustment will be made for each speaker in 3.4 cm steps.

Example 1. Listening Position: Front Left Seat

Adjust the time correction level of the front left speaker to a high value and the rear right to zero or a low value.

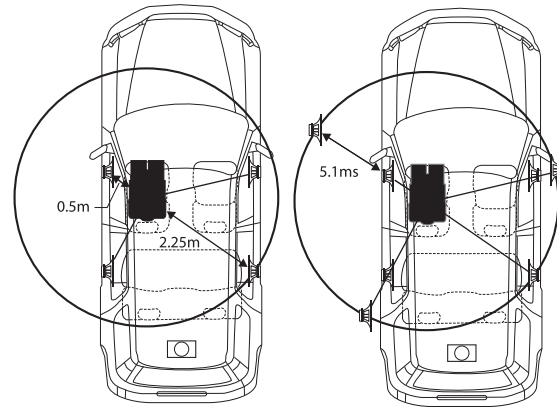

The sound is not balanced because the distance between the listening position and the various speakers is different. The difference in distance between the front left speaker and the rear right speaker is 1.75 m (68-7/8"). Here we calculate the time correction value for the front left speaker in the diagram on the above.

Conditions:

Farthest Speaker – listening position : 2.25 m (88-9/16")

Front left speaker – listening position : 0.5 m (19-11/16")

Calculation: $L = 2.25 \text{ m} - 0.5 \text{ m} = 1.75 \text{ m} (68-7/8")$

Time correction = $1.75 \div 343^* \times 1,000 = 5.1 \text{ (ms)}$

* Speed of sound: 343 m/s (765 mph) at 20°C

In other words, giving the front left speaker a time correction value of 5.1 ms makes it seem as if its distance from the listener is the same as the distance to the farthest speaker.

Time correction eliminates the differences in the time required for the sound to reach the listening position.

The time of the front left speaker is corrected by 5.1 ms so that its sound reaches the listening position at the same time as the sound of other speakers.

Example 2. Listening Position: All Seats

Adjust the time correction level of each speaker to almost the same level.

- Sit in the listening position (driver's seat, etc.) and measure the distance (in meters) between your head and the various speakers.**
- Calculate the difference between the distance correction value to the farthest speaker and the other speakers.**

$$L = (\text{distance to farthest speaker}) - (\text{distance to other speakers})$$

These values are the time correction values for the different speakers. Setting these values to make each sound reach the listening position at the same time as the sound of other speakers.

Time Correction Value List


Time Difference (msec)	Distance (cm)	Distance (inch)	Time Difference (msec)	Distance (cm)	Distance (inch)
0.0	0.0	0.0	5.1	173.4	68.3
0.1	3.4	1.3	5.2	176.8	69.7
0.2	6.8	2.7	5.3	180.2	71.0
0.3	10.2	4.0	5.4	183.6	72.4
0.4	13.6	5.4	5.5	187.0	73.7
0.5	17.0	6.7	5.6	190.4	75.0
0.6	20.4	8.0	5.7	193.8	76.4
0.7	23.8	9.4	5.8	197.2	77.7
0.8	27.2	10.7	5.9	200.6	79.1
0.9	30.6	12.1	6.0	204.0	80.4
1.0	34.0	13.4	6.1	207.4	81.7
1.1	37.4	14.7	6.2	210.8	83.1
1.2	40.8	16.1	6.3	214.2	84.4
1.3	44.2	17.4	6.4	217.6	85.8
1.4	47.6	18.8	6.5	221.0	87.1
1.5	51.0	20.1	6.6	224.4	88.4
1.6	54.4	21.4	6.7	227.8	89.8
1.7	57.8	22.8	6.8	231.2	91.1
1.8	61.2	24.1	6.9	234.6	92.5
1.9	64.6	25.5	7.0	238.0	93.8
2.0	68.0	26.8	7.1	241.4	95.1
2.1	71.4	28.1	7.2	244.8	96.5
2.2	74.8	29.5	7.3	248.2	97.8
2.3	78.2	30.8	7.4	251.6	99.2
2.4	81.6	32.2	7.5	255.0	100.5
2.5	85.0	33.5	7.6	258.4	101.8
2.6	88.4	34.8	7.7	261.8	103.2
2.7	91.8	36.2	7.8	265.2	104.5
2.8	95.2	37.5	7.9	268.6	105.9
2.9	98.6	38.9	8.0	272.0	107.2
3.0	102.0	40.2	8.1	275.4	108.5
3.1	105.4	41.5	8.2	278.8	109.9
3.2	108.8	42.9	8.3	282.2	111.2
3.3	112.2	44.2	8.4	285.6	112.6
3.4	115.6	45.6	8.5	289.0	113.9
3.5	119.0	46.9	8.6	292.4	115.2
3.6	122.4	48.2	8.7	295.8	116.6
3.7	125.8	49.6	8.8	299.2	117.9
3.8	129.2	50.9	8.9	302.6	119.3
3.9	132.6	52.3	9.0	306.0	120.6
4.0	136.0	53.6	9.1	309.4	121.9
4.1	139.4	54.9	9.2	312.8	123.3
4.2	142.8	56.3	9.3	316.2	124.6
4.3	146.2	57.6	9.4	319.6	126.0
4.4	149.6	59.0	9.5	323.0	127.3
4.5	153.0	60.3	9.6	326.4	128.6
4.6	156.4	61.6	9.7	329.8	130.0
4.7	159.8	63.0	9.8	333.2	131.3
4.8	163.2	64.3	9.9	336.6	132.7
4.9	166.6	65.7			
5.0	170.0	67.0			

Volume Setup

[Volume] is selected on the Setup menu screen.

Phone Volume Setup

[Phone] is selected on the Volume Setup menu screen.

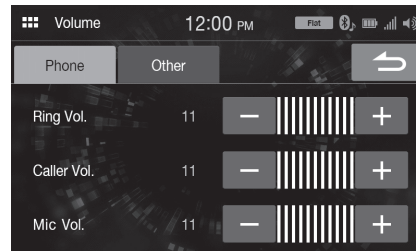

Adjusting the Ring Tone Level

You can adjust the receive volume, during the call.

Setting item:

Ring Vol.

Setting contents:

01 to 11 (Initial setting: 05)

Adjusting the Caller Level

You can adjust the volume of the incoming call.

Setting item:

Caller Vol.

Setting contents:

01 to 11 (Initial setting: 05)

Adjusting the Microphone Level

You can adjust the transmit volume, during the call.

Setting item:


Mic Vol.

Setting contents:

01 to 11 (Initial setting: 05)

Volume Setup except for Phones (Other)

[Other] is selected on the Volume Setup menu screen.

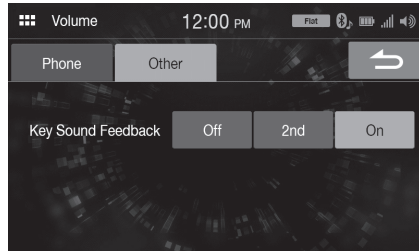

Volume Setting

You can change the volume of the sound heard when a button is touched.

Setting item:

Key Sound Feedback

Setting contents:

Off, 2nd, On

System Setup

[System] is selected on the Setup menu screen.

Setting item:


System

Setting contents:

Clock, Dimmer, Language, Reset

Clock Setup

[Clock] is selected on the System Setup Menu screen.

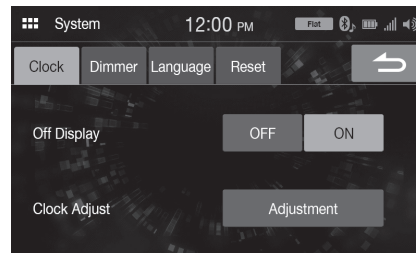

Setting item:

Clock Adjust

Setting items:

12h (Initial setting), 24h

Setting contents:

01 - 12 or 00 - 23, 00 - 59, AM/PM

Setting Off Display

To not display the clock when turning the unit to OFF, set "Off Display" to [On].

Setting item:


Off Display

Setting contents

Off (Initial setting), On

Screen/Lighting Customize (Dimmer)

[Dimmer] is selected on the System Setup Menu screen.

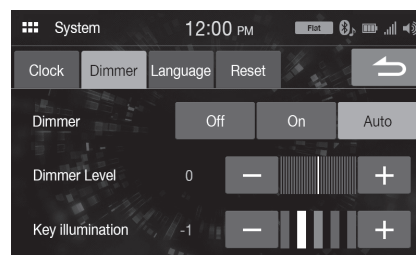

Setting the Brightness of the Backlighting (Dimmer)

Backlighting is provided by LEDs light built into the liquid crystal panel. The illumination control adjusts the brightness of the backlighting based on the car ambient lighting for easier viewing.

Setting item:

Dimmer

Setting contents:

Off, On, AUTO (Initial setting)

- | | |
|-------|--|
| Off: | Deactivate Auto Dimmer mode to keep the background illumination of the monitor bright. |
| On: | Keep the background illumination of the monitor dark. |
| AUTO: | Adjust the brightness of the background illumination of the monitor automatically to the brightness of the car interior. |

- When "On" is set, the setting is also applied for the button lighting in "Adjusting the Dimmer of Button Lighting at Night" (page 17) and "Adjusting the Minimum Level of Backlight" (page 17).

Adjusting the Minimum Level of Backlight

You can adjust the brightness of the backlight. This function could be used, for instance, to change the screen brightness while traveling at night.

Setting item:

Dimmer Level

Setting contents:

-14 to 14 (Initial setting: 0)

- This setting is only available when "Dimmer" is set to [On] or [AUTO].

Adjusting the Dimmer of Button Lighting at Night

You can adjust the brightness of the button lighting at night with the dimmer.

Setting item:

Key illumination

Setting level:

-2 to 2 (Initial setting: 0)

- This setting is only available when "Dimmer" is set to [On] or [AUTO].

Language Setup

[Language] is selected on the System Setup Menu screen. The Setup menu, feedback information, etc. for this unit can be changed to appear in the selected language.

Setting item:

Language

Setting contents:

English, Français, Thai, Vietnamese

- The currently selected language is displayed.

Reset

[Reset] is selected on the System Setup Menu screen. You can initialize all data, to restore the factory settings. Remove the USB flash drive, etc. from the system before operation.

Setting item:

Reset


1 Touch [Reset].

2 After the confirmation message appears, touch [Yes].
The system starts initialization.

- Do not turn on/off the power, change the ignition key position or remove the screen panel until system restart is completed.

Connectivity Setup

[Connectivity] is selected on the Setup menu screen.

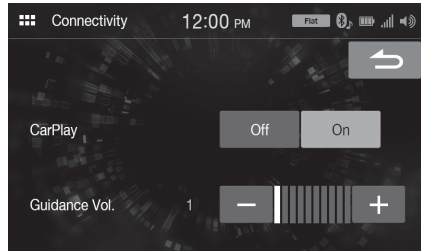

Setting item:
Connectivity

Using Apple CarPlay mode

Setting item:
CarPlay

Setting contents:
Off, On (Initial setting)

- To use iPhone as iPod mode, select [Off].

Adjusting the Guidance Volume

Setting item:
Guidance Vol.

Setting contents:
00 to 10

Bluetooth Setup


[Bluetooth] is selected on the Setup menu screen.

Setting item:
Bluetooth

Setting contents:
Devices, Info, Search

Device Setup

[Devices] is selected on the Bluetooth Setup Menu screen. You can register and set up Bluetooth compatible devices.

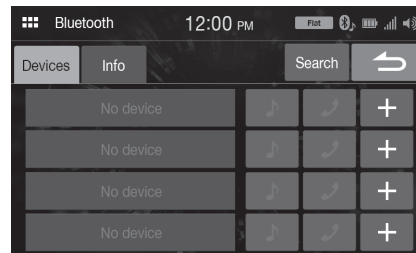

Pairing the Bluetooth Device

- 1 Touch [Devices] on the Bluetooth Setup Menu screen.
- 2 Touch [+] of "No Device".
- 3 Select this unit (iLX-W650) to set the Bluetooth connection on the Bluetooth device.
When the device registration is complete, a message appears and the device returns to normal mode.

- The Bluetooth registration process differs depending on the device version and SSP (Simple Secure Pairing). If a 4 or 6 character Passcode appears on this system, enter the Passcode on the Bluetooth device.
- If a 6 character Passkey appears on this system, make sure the same passkey is displayed on the Bluetooth device, and follow the screen.

Setting the Bluetooth Device

Select one of 4 paired Bluetooth compatible devices that you previously registered.

- 1 Touch [Devices] on the Bluetooth Setup Menu screen.
- 2 Touch [🎵] (Audio) or [📞] (Hands-free) of the device you want to connect from the Paired Device list.

Deleting a Bluetooth Device from the list

You can delete the information of a previously connected Bluetooth compatible device.

- 1 Touch [Devices] on the Bluetooth Setup Menu screen.
- 2 Touch [—] of the Bluetooth compatible device to delete from the Paired Device list.
- 3 Touch [Yes].

- Touching [No] will cancel the setting.

Displaying Bluetooth Information

[Info] is selected on the Bluetooth Setup Menu screen.
You can display the Bluetooth device name and device address of this unit.

Setting item:

Info

- If you touch [Unpair all devices], all paired devices will be deleted from the unit.

Searching for a Bluetooth Device

Setting item:

Search

- 1 Touch [Search] on the Bluetooth Setup Menu screen.
The Bluetooth devices can be searched are displayed in a list.
- 2 Touch the device you want to connect from the list.
 - You can register up to 4 Bluetooth compatible mobile phones.
 - You can connect two Bluetooth Devices; one exclusively for Hands-Free Phone and one exclusively for Bluetooth Audio.
- 3 When the device registration is complete, a message appears and the device returns to normal mode.
 - The Bluetooth registration process differs depending on the device version and SSP (Simple Secure Pairing). If a 4 or 6 character Passcode appears on this system, enter the Passcode using the Bluetooth device. If a 6 character Passkey appears on this device, make sure the same passkey is displayed on the Bluetooth compatible device.
 - If all 4 devices have been registered, you cannot register a 5th device. To register another device, you need to delete one of the other 4 devices first.

Auto Connection

When the ACC is turned ON, the Bluetooth Hands-Free device is automatically connected. After connecting to the Hands-Free device, the Bluetooth Audio device is also connected automatically.

Downloading the Phonebook


If Hands-Free device is connected, you can download the phonebook from the device.

- When the device is disconnected, the downloaded phonebook is not shown.

Camera Setup

[Camera] is selected on the Setup Menu screen.
You can set up items related to the Camera.

Touch [Page 1], [Page 2] or [Page 3] to change the screen.

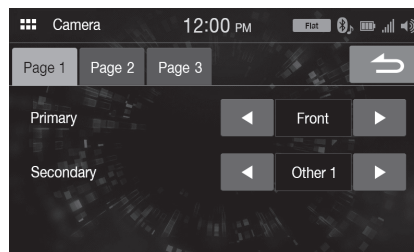

Camera Primary and Secondary Setting

When you connect two cameras or more, set the priority for displaying on the screen.

Setting item:

Primary, Secondary (Page 1)


Setting contents:

Off, Rear, Front, Side (R), Side (L), Other 1, Other 2

- If the content is set to "Primary", it is not displayed in "Secondary". If the content "Secondary", it is not displayed in "Primary". These do not apply if the content is set to [Off].

Camera Picture Quality Setup

You can adjust the picture quality for the primary and secondary cameras.

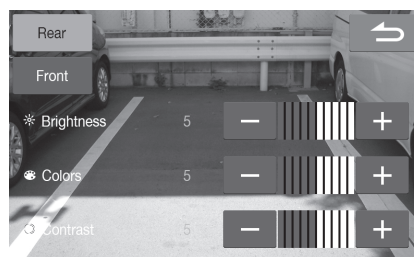

Setting item:

Picture Quality (Page 2)

Further setting item:

Adjustment

- You can switch to the setup screen for the secondary camera by touching the secondary camera button.
- When both "Primary" and "Secondary" are set to [Off], [Page 2] cannot be selected.

Adjusting Brightness

Setting item:

Brightness

Setting contents:

-5 to 5 (Initial setting: 0)

- You can adjust the brightness between MIN (-5) and MAX (5).

Adjusting Color of Display

Setting item:

Colors

Setting contents:

-5 to 5 (Initial setting: 0)

- You can adjust the color between MIN (-5) and MAX (5).

Adjusting Display Contrast

Setting item:

Contrast

Setting contents:

-5 to 5 (Initial setting: 0)

- You can adjust the contrast between MIN (-5) and MAX (5).

Setting the Camera Signal Input

When the camera is connected, the video input signal type can be chosen.

Further setting item:

Camera Signal (Page 2)

Setting contents:

NTSC (Initial setting) / PAL

- When both "Primary" and "Secondary" are set to [Off], [Page 2] cannot be selected.

Turning the Rear Camera Guide On/Off

When displaying the rear camera view on the screen, you can set to hide or show the camera guide.

Setting item:

Rear Camera Guide (Page 3)

Setting contents:

Off/On

- When both "Primary" and "Secondary" are set to [Off], [Page 3] cannot be selected.
- To use this setting, set "Primary" or "Secondary" to [Rear].

Adjusting the Rear Camera Guide

You can adjust the camera guide position.

Setting item:

Rear Camera Guide (Page 3)


Further setting item:

Adjustment

1 Touch [Adjustment] on "Page3".

The camera guide adjustment screen is displayed.

- When both "Primary" and "Secondary" are set to [Off], [Page 3] cannot be selected.
- To use this setting, set "Primary" or "Secondary" to [Rear].
- To use this setting, set "Rear Camera Guide" to [On].

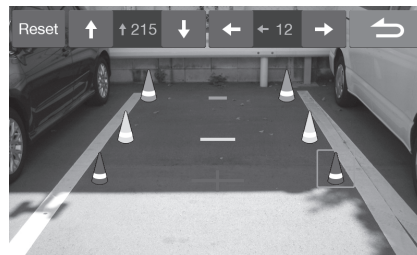

2 Touch the icon you want to move.


3 Touch [↑], [↓], [←] or [→] to move the icon.

- Touching [Reset] clears adjustments and returns to the setting before guide line alteration.

4 Touch [↶] to complete the adjustment and return to the previous screen.

Information

[**Information**] is selected on the Setup menu screen.
Information about this system is shown.

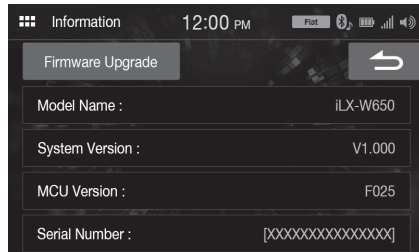



- To update the software of this system, refer to “Product Software Update” (page 36).

Apple CarPlay (Optional)

Apple CarPlay is a smarter, safer way to use your iPhone in the car. Apple CarPlay takes the things you want to do with your iPhone while driving and puts them right on the unit. You can get directions, make calls, send and receive messages, and listen to music, all in a way that allows you to stay focused on the road. Just plug in your iPhone to the unit and go.

- Before using this function, plug in your iPhone using Lightning to USB Cable (Supplied with iPhone) to the unit.
- Some functions may not be available while driving.
- About iPhone models usable with this unit, see “iPod mode on iPhone (Optional)” (page 26). Only an iPhone 5s or later compatible with Apple CarPlay function.
- Before operating Apple CarPlay, set “CarPlay” to [On] (page 18).

Access to Apple CarPlay

- 1 Touch the  (HOME) button.**
The HOME screen is displayed.
 - 2 Touch [Apple CarPlay].**
The Apple CarPlay screen is displayed.
Touch the desired App icon on the unit, or use Siri function by touching the  button.
- When a used iPhone 5s or later is reconnected, touch the pop-up message-“Apple CarPlay connected.” within 5 seconds to access to Apple CarPlay screen.
 - The App must be Apple CarPlay compatible in order to appear in the Home screen.

Android Auto (Optional)

What is Android Auto


Android Auto is designed to make it easier to use apps from your phone while you're on the road. Navigate with Google Maps, listen to playlists or podcasts from your favorite apps, and more.

Activate Android Auto

Download the Android Auto App from the Google Play store before continuing.

Just plug in your smartphone to the unit's USB connector, then follow the prompt to pair your smartphone with the unit.

- The connected smartphone with Android Auto will disconnect other phone's Bluetooth connection and pair to the unit.

- 1 Touch the  (HOME) button.**
The HOME screen is displayed.
 - 2 Touch [Android Auto].**
The Android Auto screen is displayed.
- You can make a call, use voice recognition function and Android Auto's compatible navigation app, etc.,
 - Only Google approved apps with necessary driver-safety measures in place can be used.

Radio


Radio main screen example



- ① Band button
Switches a band.
- ② Information display
- ③ Preset button
Displays the preset stations with a short touch.
Touch for at least 1 second to memorise the current station as a preset station.
- ④ Plays each preset station for about 5 seconds.
- ⑤ Memorises stations automatically
- ⑥ Searches a station, and then plays it for about 5 seconds.
- ⑦ Increases frequency
Touch and hold to change the frequency continuously.
- ⑧ Decreases frequency
Touch and hold to change the frequency continuously.

Radio Basic Operation

Listening to the Radio

- 1 Touch the  (HOME) button and select radio mode.
The display shows the radio mode screen.
- 2 Select the desired band from [FM1] / [FM2] / [FM3] / [AM].
- 3 Touch [◀], [▶] to change the radio frequency up or down respectively.
Touch and hold to change the frequency continuously.

Presetting Stations Manually

- 1 Tune in a desired radio station you wish to store in the preset memory by manual or automatic seek tuning.
 - 2 Touch and hold the Preset number you want to store for at least 1 second.
The selected station is stored.
 - 3 Repeat the procedure to store up to 5 other stations onto the same band.
To use this procedure for other bands, simply select the desired band and repeat the procedure.

A total of 24 stations can be stored in the preset memory (6 stations for each band; FM1, FM2, FM3, or AM).
- If a preset memory has already been set in the same preset number, it will be cleared and the new station will be memorized.

Presetting Stations Automatically

The tuner can automatically seek and store 6 strong stations in the selected band in ascending order of frequency.

Select the desired band then touch and hold [A.MEMO].

The tuner automatically seeks and stores 6 strong stations into the preset buttons in ascending order of frequency. When automatic storing has completed, the station stored in the preset 1 is selected.

- If no stations are stored, the tuner will return to the original station you were listening to before the automatic storing procedure began.
- You can cancel this process by touching [A.MEMO] while the tuner is automatically seeking stations. Canceling will return the tuner preset to the previous setting.

Tuning to Preset Station

After selecting the desired band, touch the desired preset button.

Scanning Stations

The tuner can automatically seek and plays the station for 5 seconds each.

- 1 After selecting the desired band, touch [F.SCAN].
Scanning stations starts.
- 2 When the desired station is played, touch [F.SCAN] again.

Scanning Preset Stations

The tuner can automatically play preset stations for 5 seconds each.

- 1 After selecting the desired band, touch [P.SCAN].
Scanning preset stations starts.
- 2 When the desired station is played, touch [P.SCAN] again.

USB Flash drive (Optional)

You can play back music files (MP3/WMA/AAC/FLAC/WAV), video files (MP4/AVI/WMV/MOV) and photo files (JPG/PNG/BMP) stored in a USB flash drive on the internal player of this system.

⚠ WARNING

It is dangerous for the driver to watch video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.


Install the unit correctly so that the driver cannot watch a video unless the car is stopped and the parking brake is applied.

If the unit is not installed correctly, the driver will be able to watch a video while driving and may be distracted from looking ahead and cause an accident. The driver or other people could be severely injured.


■ USB Audio mode screen



■ USB Video mode screen

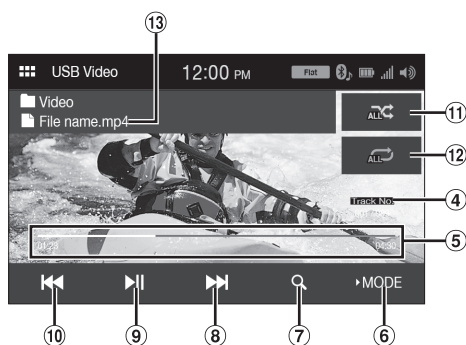

■ USB Photo mode screen

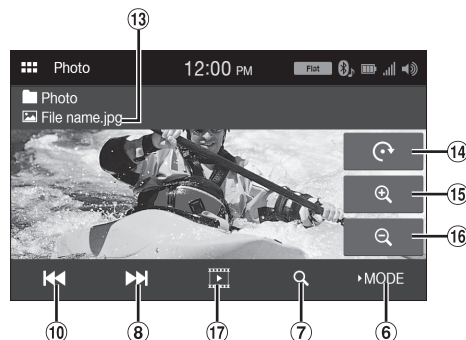

- ① Artwork display
- ② Information display
- ③ Scan Play
- ④ Current track number/Total track number
- ⑤ Elapsed time/Total time for playing
- ⑥ Changes the USB mode
- ⑦ Displays the search screen
- ⑧ Finds the beginning of next chapter/Fast-forwards when touched for at least 1 second
- ⑨ Pause and Play
- ⑩ Finds the beginning of the current file/Finds a previous file within 1 second after playback starts/Fast-reverses when touched for at least 1 second
- ⑪ Shuffle mode
- ⑫ Repeat mode
- ⑬ File Name
- ⑭ Rotates
- ⑮ Zoom in
- ⑯ Zoom out
- ⑰ Play the Slide Show

The USB Video/USB Photo operation screen display during video/photo file playback

Touch the screen while the USB Video/USB Photo playback screen is displayed.

The USB Video/USB Photo operation screen is displayed.




- The operation screen changes to the visual screen in the USB Video/USB Photo mode for 5 seconds after an operation has been performed.
- For your safety, video is not displayed and only audio can be heard while driving.

Playback

1 Touch the  (HOME) button and select USB mode.
The display shows the USB mode screen.

2 Touch [▶ Mode].

3 Select the desired mode.

- : USB Audio mode
- : USB Video mode
- : USB Photo mode

4 Touch [◀◀] or [▶▶] to select the desired track (file).

Returning to the beginning of the current (or previous) track (file):
Touch [◀◀].

Fast reverse:
Touch and hold [◀◀].

Advancing to the beginning of the next track (file):
Touch [▶▶].

Fast forward:
Touch and hold [▶▶].

5 To pause playback, touch [⏸] (USB Audio or Video).
Touching [⏸] again will resume playback.

- The playback time may not be correctly displayed when a VBR (Variable Bit Rate) recorded file is played back.
- If there is tag information, artist name/album name/track name is displayed.
- ID3 tag/WMA tag
If an MP3/WMA/AAC/FLAC/WAV file contains ID3 tag/WMA tag information, the ID3 tag/WMA tag information is displayed. (e.g., song name, artist name, and album name)

Fast-forwarding/Fast-reversing (USB Video)

1 During playback, touch and hold [◀◀] (Fast-reverse) or touch and hold [▶▶] (Fast-forward).
Touch and hold for more than 1 second to fast-forward/fast-reverse.




2 Release [◀◀] or [▶▶] to return to normal playback.



- No sound is played back during fast-forwarding/fast-reversing.

Repeat Play (USB Audio or USB Video)

1 Touch and hold [↺].
• The [↺] button displays the currently selected mode.

2 Select your desired Repeat mode.




- ALL : All files are repeatedly played back.
- File : Only the file currently playing is repeatedly played back.
- Folder : Only files in a folder are repeatedly played back.


- By only touching [ALL ], you can select the mode except for [File ].

Shuffle Play (USB Audio or USB Video)

1 Touch and hold [↻].
• The [↻] button displays the currently selected mode.

2 Select your desired Shuffle mode.

- ALL : All songs in the USB flash drive are played back in random sequence. Any one song does not play back again until all songs have been played back.
- Folder : A Folder is selected randomly and songs in the Folder are played back in order. After all songs are played in a Folder, the next Folder is selected randomly.
- OFF : Shuffle mode is Off.

- By only touching [↻], you can select the mode except for [ALL ].

Searching for a Desired Song/Video/Photo

1 Touch [🔍] (Search).

2 Touch [◀] or [▶] to select the folder.

3 Touch your desired File name.

When you select a Folder name, repeat the same procedure to select another Folder name or File name.

Slide Show (USB Photo)

The Slide Show shows photos that change every 2 seconds.

Touch [▶▶] on the Photo mode screen.

About USB Video format

The video formats (USB Flash drive) supported by the unit are as follows.

- Supported Container: MP4/AVI/WMV/MOV
- Supported Video Coding: H.264/MPEG-4 AVC
- Supported Audio Coding: MP3, AAC
- MAX File Size: 4GB

iPod mode on iPhone (Optional)

A separately sold Lightning to USB cable (KCU-471i), etc., is required.

- This unit does not support video playback from iPhone which connected to this unit via USB Connector.
- Internet or telephone function, etc., of the iPhone is not controllable from the unit, but these functions can be controlled using the iPhone itself.
- Before operating iPod mode on iPhone, set "CarPlay" to [Off] (page 18).

About iPhone models usable with this unit

- The following devices have been tested and shown to work with this unit. Correct function of earlier versions cannot be guaranteed.
 - iPhone X
 - iPhone 8
 - iPhone 8 Plus
 - iPhone 7
 - iPhone 7 Plus
 - iPhone SE
 - iPhone 6s
 - iPhone 6s Plus
 - iPhone 6
 - iPhone 6 Plus
 - iPhone 5s


■ iPod main screen example






- ① Artwork display
- ② Information display*
- ③ Repeat mode
- ④ Current song no./Total song no.
- ⑤ Elapsed time/Total time for playing
- ⑥ Displays the search screen
- ⑦ Finds the beginning of the current file/Finds a previous file within one second after playback starts/Fast-reverses when touched for at least 1 second
- ⑧ Pause and Play
- ⑨ Finds the beginning of the current file/Finds a previous file within one second after playback starts/Fast-reverses when touched for at least 1 second
- ⑩ Shuffle mode


* Podcast mode.

Playback


1 Touch the  (HOME) button and select iPod mode.
The display shows the iPod mode screen.

2 Touch [] or [] to select the desired track (file).



Returning to the beginning of the current (or previous) track (file):
Touch [].

Fast reverse the current track :
Touch and hold [].

Advancing to the beginning of the next track (file) :
Touch [].

Fast forward the current track :
Touch and hold [].

3 To pause playback, touch [].

- If a song is playing on the iPhone before it is connected to the unit, it will continue playing when it is connected.
- An episode may have several chapters. The chapter can be changed by touching [] or [].
- If the artist, album or song name, created in iTunes, has too many characters, songs may not be played back when connected to the unit. Therefore, a maximum of 64 characters is recommended. The maximum number of characters for the unit is 64.
- Some characters may not be correctly displayed.


Searching for a Music File

An iPhone can contain thousands of songs. For this reason, this unit can make various searches using the search function as shown below. Using the Playlist/Artist/Album/Podcast/Audiobook/Genre/Composer/Song/iTunes Radio search mode's individual hierarchy, you can narrow down your search as shown in the table below.
<Music Search Menu>

Hierarchy 1	Hierarchy 2	Hierarchy 3	Hierarchy 4
Radio	—	—	—
Playlists	Songs	—	—
Artists	Albums	Songs	—
Albums	Songs	—	—
Songs	—	—	—
Genres	Artists	Albums	Songs
Composers	Albums	Songs	—
Podcast	Episodes	—	—
Audiobook	—	—	—

For example: Searching by Artist name

The following example explains how an Artists search is performed.

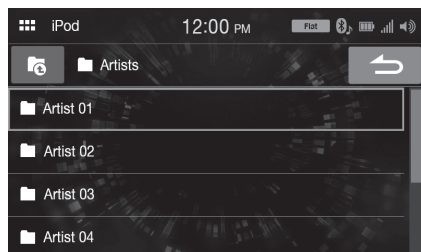

1 Touch [Q] (Search) during playback.

2 Touch [Artists].

The Artists search screen is displayed.

3 Select the desired artist.

4 Touch the desired album's name.

All songs of the selected album are displayed.

5 Touch the desired song's name.

The selected song is played back.

- If you touch [6], the category browsing mode screen is displayed.

Repeat Play

1 Touch [Repeat].

- The [Repeat] button displays the currently selected mode.

2 Select your desired Repeat mode.

ALL [Repeat]: All files are repeatedly played back.

File [Repeat]: Only the file currently playing is repeatedly played back.

OFF [Repeat]: Repeat mode is Off.

Shuffle Play

1 Touch [Shuffle].

- The [Shuffle] button displays the currently selected mode.

2 Select your desired Shuffle mode.

The selected Shuffle mode changes the button.

ALL [Shuffle]: All songs in the iPod are played back in random sequence. Any one song does not play back again until all songs have been played back.

OFF [Shuffle]: Shuffle mode is Off.

Bluetooth Operation

Setup Before Using

About Bluetooth

Bluetooth is a wireless technology allowing communication between a mobile device or personal computer over short distances. This enables a hands-free call or data transmission between Bluetooth compatible devices. Bluetooth transmission is available in the unlicensed 2.4 GHz spectrum if the distance between devices is within 10 meters. For details, refer to the Bluetooth website (<http://www.bluetooth.com/>).

- Depending on the Bluetooth version, a Bluetooth compatible device may not be able to communicate with this unit.
- Proper function of this unit with all Bluetooth compatible devices is not guaranteed. For handling of the Bluetooth compatible device, consult your Alpine dealer or Alpine website.
- Depending on the surroundings, Bluetooth wireless connection may be unstable.
- When you place a call, or perform setup operations, be sure to stop your car in a safe place.
- Depending on the connected Bluetooth compatible device(s), the function may differ. Also refer to the Owner's Manual of the connected device(s).

About the Hands-free Phone

Hands-free calls are possible when using a HFP (Hands-Free Profile) compatible mobile phone with this unit.

- Avoid performing a hands-free call in heavy traffic or on narrow or winding streets.
- Close the windows while calling to reduce background noise.
- If both calling parties are using hands-free devices, or the call is made in a noisy location, difficulty hearing the other person's voice is normal.
- Depending on telephone line conditions or certain mobile devices used, voices may sound unnatural.
- When using a microphone, speak as directly as you can into the microphone to obtain the best sound quality.
- Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in the Owner's Manual are based upon the latest available information and are believed to be accurate at the time of printing. Alpine reserves the right to change or modify any information or specifications without notice or obligation.
- Notice that when you connect an iPhone 5s or later/Android smartphone which installed Android Auto App, the operation screen may differ from this section.

Before Using Bluetooth

Before using the hands-free phone/audio function, the following settings need to be made.

Register a Bluetooth device in this unit.

- See "Bluetooth Setup" (page 18).
- You can search for this unit using a Bluetooth compatible device, and then connect that Bluetooth compatible device to this unit. The device name of this unit is "iLX-W650" and the initial number of the passcode is "0000." Also refer to the Owner's Manual of the connected device(s).


Hands-free Phone Control

Touch **[Bluetooth]** in the HOME screen to display the Bluetooth menu screen.



[Phone] button

Phone menu screen example

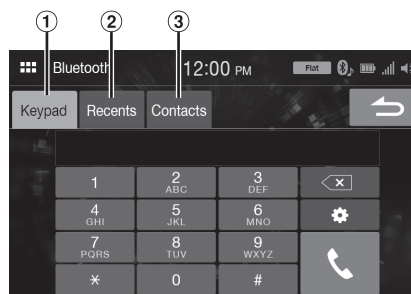

- ① Keypad screen
Use to type a phone number.
- ② Recent Events list*
You can display up to 60 items, such as phone numbers of the most recent incoming calls, missed calls and outgoing calls, and contact names that are registered in the Phone Book. When 60 items exist in the list, the oldest item is deleted when a further item is to be added.
- ③ Contacts list*
You can make a phone call from the Phone Book, or edit the Phone book.


* If the Hands-Free Phone is not connected, the Bluetooth Setup screen will be displayed. See "Bluetooth Setup" (page 18).

Answering a Call

- 1 An incoming call triggers the ringtone and an incoming call display.



- 2 Touch [Answer].
The call starts.

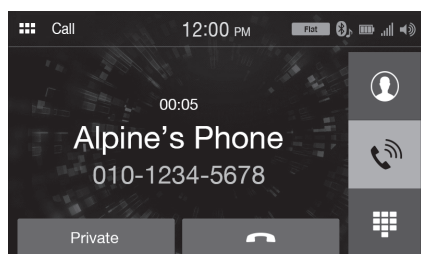

- During a call, the audio for the current mode on the unit is muted. After calling, playback will resume.
- When the caller's number is transmitted to the system, if the caller's name is stored in the phone book, the name is displayed. If the name is not stored, the number is displayed.
- Touch [Decline] to reject an incoming call.
- By touching [Call] during phone call, you can change to the Phone Operation screen and adjust the speech volume, etc. For details, see "Phone Operation Screen" (page 31).

Hanging up the Telephone


- 1 Touch [End Call].
The call finishes.

Calling

Making a phone call using the Phone Menu

Entering a Phone Number to Make a Call

- 1 Touch [Keypad].
The number input screen (Keypad) appears.

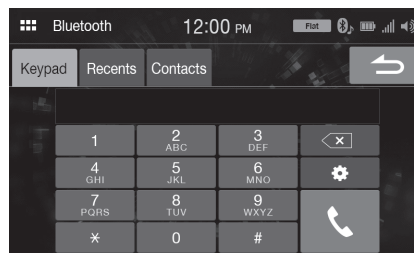


Touch [X] to delete an entered number.

- 2 Enter the phone number you wish to call.
 - You can enter up to 21 digits.
- 3 Touch [Call].
The phone call is started.
 - To change the Bluetooth device, touch ## to display the Bluetooth Setup screen. See "Bluetooth Setup" (page 18).

Making a phone call from the Recent Events list

- 1 Touch [Recents] to change to the Recent Events list screen.

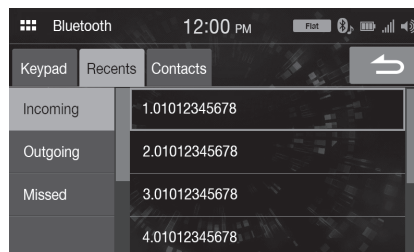


- 2 Select a category from [Incoming], [Outgoing], or [Missed].
- 3 Touch the name of the contact or number you want to call.
The phone call is started.

Calling from the Contacts list (Phone Book)

- 1 Touch [Contacts] to change to the Contacts list screen.
- 2 Touch the name of the contact or number you want to call.

3 Touch the phone number.

The Phone Operation screen is displayed.

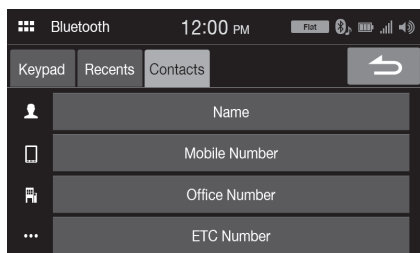

4 Touch the number you want to call.

The phone call is started.

- The Contacts list screen is also displayed by touching [📞] on the Phone Operation screen.

Using Voice Recognition function

You can use Siri function of your iPhone or make a telephone call by using voice operation of your smartphone.

- When using Apple CarPlay or Android Auto, the operation screen may differ from the screen design in the Owner's Manual.

Using Siri

You can use the Siri function of your iPhone. To use this function, set the Siri setting of your iPhone to ON.

- Connect your iPhone to the unit via Bluetooth, then set to "Hands-free" or "Both" (page 18).
- The available functions differ depending on the connected iPhone.
- Ask Siri to play a track from the music library applies only to USB source.
- Siri and other streaming services are enabled by connecting to compatible smartphones that are able to receive data. Please ensure that cellular data and/or Wi-Fi is turned on in the smartphone to enjoy these features.
- Extensive use of Siri or other streaming services may increase your phone's data usage. Please check with your phone company to ensure you have an appropriate Data plan.

1 Touch [📞] button.



The Voice Recognition mode screen is displayed.

2 Speak into the microphone supplied with this unit.

- If no speech is detected, the unit may pause depending on version of the connected iPhone. In that case, touch the microphone icon [📞] in the center of the Voice Control mode screen. You can continue to use the Voice Control mode.

3 To finish the Voice Control mode, touch [X].

- Depending on the iPhone, the Siri function may finish automatically.
- For adjusting the volume, see "Adjusting the Speech Volume" (page 31).

Voice Dial Function

You can make a telephone call by using voice operation.

- Connect your smartphone to the unit via Bluetooth, then set to “Hands-free” or “Both” (page 18).

1 Touch [🎤] button.



The Voice Dial mode screen is activated.


2 Say the telephone number* or name* you want to call, into the microphone.

* The number and name depend on the voice dial information stored in the smartphone.

3 To finish the Voice Dial mode, touch [X].

- You can perform this operation only when a voice dial compatible smartphone is connected.
- The Voice Dial function performance depends on the recognition range of the smartphone and mounting location of the microphone.
Note when the microphone is mounted.
- Voice dial operation depends on the function being available on the smartphone. For details, refer to the owner's manual of the smartphone.
- Depending on the smartphone, the Voice Dial operation may finish automatically.
- For adjusting the volume, see “Adjusting the Speech Volume” (page 31).

Phone Operation Screen

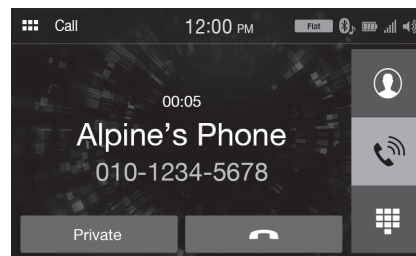

Adjusting the Speech Volume

You can adjust Caller Level and Mic. Level (Microphone Level).

1 Touch [🔊].

2 Touch [–] or [+] of “Mic Vol.” or “Caller Vol.”

You can adjust the volume in 11 levels.

- This operation is not available for the Private Call setting.

Changing the Voice Output

The voice output for calls is switchable between car speakers and the mobile phone speaker.

Touch [Private] or [Handsfree].

- Depending on the mobile phone, this operation may not be possible.

DTMF (Touch-Tone) Function

Transmits a DTMF (Touch-Tone) during a call.

1 Touch [📄] (Keypad).


The number input screen (Keypad) appears.

2 Input number.

- You can transmit a Touch-Tone signal during a call.

Phone Book Function

Phone Book screen example

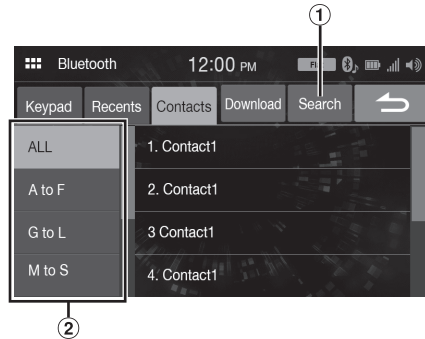

- ① Use to search by directly inputting a name or phone number with the Keypad.
For details, see "How to Input Characters and Numbers (Keypad)" (page 9).
- ② Use to narrow down your search for names, etc.

Synchronizing the Phone Book

You can synchronize the system's phone book with the mobile phone's phone book.

Touch [Download].

Synchronization of the phone books starts.

- You can store up to 1,000 registered name in the phone book.
- You can store up to 3 phone numbers by one person's name.

Searching in the Phone Book

You can make a call using the phone book search function.

1 Touch [Search].

The Input User Name screen (Keypad) is displayed.

2 Input the string of letters of the name that you want to search, then touch [OK].

A list of names beginning with the string of letters you entered is displayed.

3 Touch the name you want to call.

The Phone Operation screen is displayed.

4 Touch the phone number.

The phone call is started.

- For details of how to input characters using the keypad, see "How to Input Characters and Numbers (Keypad)" (page 9).

Bluetooth Audio

If a Bluetooth compatible mobile phone, portable player, etc. is connected by wireless, you can play back a song (operation is controllable from the unit).

- Operation may vary, depending on the Bluetooth compatible device.

Bluetooth Audio main screen example



- ① Information display
- ② Current track number/Total track number
- ③ Elapsed time/Total time for playing
- ④ Finds the beginning of next chapter/Fast-forwards when touched for at least 1 second
- ⑤ Pause and Play
- ⑥ Finds the beginning of the current file/Finds a previous file within one second after playback starts/Fast-reverses when touched for at least 1 second
- ⑦ Shuffle mode
- ⑧ Repeat mode

- The displayed onscreen buttons may differ depending on the AVRCP version.
- Song title/Artist title/Album title/Elapsed time do not display for AVRCP Ver. 1.0.
- To play back audio, a mobile phone or a portable player conforming to A2DP (Advanced Audio Distribution Profile) or AVRCP (Audio/Video Remote Control Profile) is required.
Not all functions work with all devices.
- During a call, sound on the Bluetooth audio source is paused.

Compatible AVRCP versions: 1.0, 1.3, 1.4, 1.5

- Available functions may differ depending on the AVRCP version.


Playback

1 Touch the  (HOME) button and select Bluetooth Audio mode.


The display shows the Bluetooth Audio mode screen.

2 Touch [] or [] to select the desired track (file).


Returning to the beginning of the current file:

Touch [].


Fast backward the current file:

Touch and hold [].

Advance to the beginning of the next file:

Touch [].

Fast forward the current file:


Touch and hold [].

3 To pause playback, touch [].

Repeat Play


Available for AVRCP Ver. 1.4 and 1.5 only.


1 Touch [].


- [] displays the currently selected mode.

2 Select your desired Repeat mode.

The selected Repeat mode changes the button.

All Track : Once all of the songs have finished playing, playback is repeated, starting with the first song.

Single Track : Only the track currently playing is repeatedly played back.

Off : Repeat mode is Off.

- Operations may differ depending on the connected Bluetooth compatible device.

Shuffle Play


Available for AVRCP Ver. 1.4 and 1.5 only.


1 Touch [].

- The [] button displays the currently selected mode.

2 Select your desired Shuffle mode.

The selected Shuffle mode changes the button.

All Track : All songs in the Bluetooth compatible devices are played back in random sequence. Any one song does not play back again until all songs have been played back.

Off : Shuffle mode is Off.

- Operations may differ depending on the connected Bluetooth compatible device.

Camera Operation (Optional)

When an optional camera is connected, the view video of camera can be output to the monitor.

Rear camera:

If a rear camera is connected, when the vehicle is reversed, the rear camera view (guide marks for vehicle width and available distance) is displayed automatically on the screen of this unit.

Front camera:

You can check the front of the vehicle with a bad visibility road.


You can adjust the quality of the camera image.

Setting items: Brightness / Color / Contrast

See "Camera Picture Quality Setup" (page 19).

Camera Operation

Displaying the Camera Image from the Menu screen

- 1 Touch the  (HOME) button.
The HOME screen is displayed.



[Camera] button

- If both "Primary" and "Secondary" are set to [Off] (page 19), the [Camera] button cannot be selected.

- 2 Touch [Camera].

The view of the camera which is set in the "Primary" setting is displayed.

- If "Primary" is set to [Off], the view of the camera set in the "Secondary" setting is displayed.
- Touch the screen when the camera image is displayed, and touch the secondary camera button to switch to the secondary camera view image.
- Touch the screen while the camera image is being displayed, and touch [X] to return to the main source screen or previous screen.
- You can perform a Guide Adjustment for the rear view image. For details, see "About the Rear Camera Guide" (page 34).

Displaying the rear view video while the car is in reverse

- 1 Shift the gear lever to the reverse (R) position.

The rear view image is displayed while the car remains in reverse.

- If neither "Primary" and "Secondary" is set to [Rear] (page 19), the rear view image is not displayed.

- 2 If you shift the gear lever to a position other than reverse (R), the monitor returns to the previous screen.


- Touch the screen when the camera image is displayed, and touch the secondary camera button to switch to the secondary camera view image.
- Never depend solely on the camera when backing up. Always turn and look and only use the camera for additional assistance.
- This function is effective when the reverse wire is properly connected.
- You can perform a Guide Adjustment for the rear view image. For details, see "About the Rear Camera Guide" (page 34).

About the Rear Camera Guide

To display the guide, set "Turning the Rear Camera Guide On/Off" (page 20) to On. Also, to adjust the guide, see "Adjusting the Rear Camera Guide" (page 20).

■ Indication mark meaning

When the car is put into reverse gear, the monitor switches to the rear view camera image. Guides appear to help visualize the car's width and distance from the rear bumper.

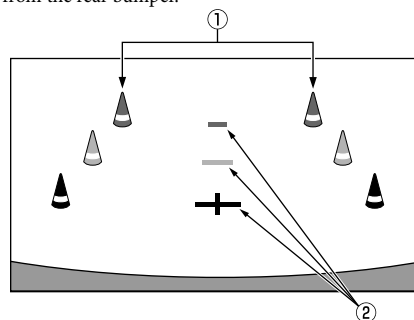

- 1 Car width extension marks (red, yellow and green in order of distance)

If properly calibrated, the marks indicate the car's width. This helps guide the car's path when backing up in a straight line.

The marks represent the distance from the rear of the car (from the rear end of the bumper).

- The marks do not move in synchronization with the steering wheel.
- Set the marks to suit the car's width.

- 2 Distance guidance marks

The marks represent the distance from the rear of the car (from the rear end of the bumper).


- The marks do not move in synchronization with the steering wheel.
- We recommend that you measure the actual distance to the marks when parked on a level surface.
- Depending on the condition of the car or road surface, the range of vision may vary.
- The camera has a limited range of vision. Objects at extreme angles to the camera (e.g. under the bumper or at opposite ends of the bumper) may not be in its field-of-vision.
- The rear camera image may have a tint which is different from the actual surroundings.
- Depending on the car, the guidance may deviate to the right or left. This is not a malfunction.

■ **Distance guidance mark**


The distance guides represent the ground level distance from the rear bumper. It is difficult to accurately estimate the distance to objects above ground level.

In the following example, the distance to A is 0.5 m and the distance to B is 1 m.

<Screen>

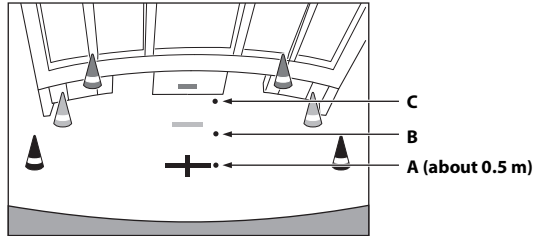

<Positions of A, B and C>



In the screen, according to the distance guidance marks, the truck seems to be parked about 1 m away (at the position B). In actual fact, however, if you reversed to position A, you would collide with the truck. In the screen, positions A, B and C seem to be located in order of proximity. However, in actual fact, the position A and C are the same distance, and B is farther away than positions A and C.


- The car width extension mark represents the distance to the road surface. The distance to an object on the road is not accurately represented by the guides.

Error between the screen and the actual road surface

In the following conditions, errors are produced between the screen guidance and the actual road surface. (The illustrations represent a case when the camera is installed in the standard position.)


■ **When there is a steep upward slope behind the car (example)**

<Screen>

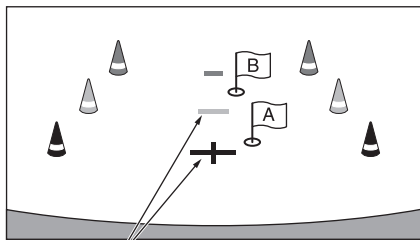

Distance guidance marks


<Situation of the car>

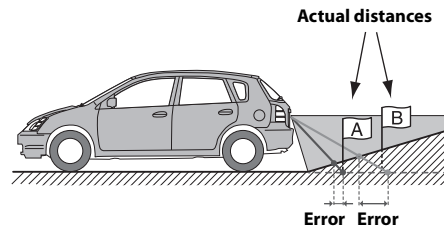


The distance guidance mark represents the distance to a flat road surface. Therefore in the case of an upward slope behind the car, the distance guides are displayed closer to the rear bumper than the actual distance. For example, if there is an obstacle on the upward slope, it may appear farther away than its actual position. Also, an error may occur between the guidance and the actual path of the car on the road surface.

■ **When there is a steep downward slope behind the car (example)**

<Screen>

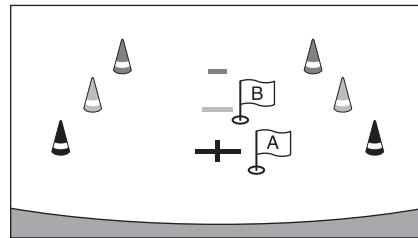

<Situation of the car>

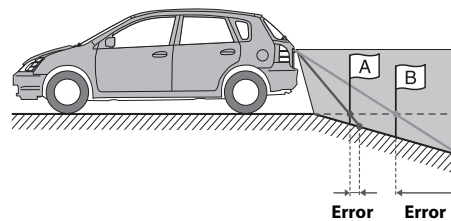

In the case of a downward slope behind the car, the distance guides are displayed farther from the rear bumper than the actual distance. If there is an obstacle on the downward slope, it seems closer than its actual position. Also, an error may occur between the guidance and the actual path of the car on the road surface.

Information

Product Software Update

This product use software that can be updated through a USB flash drive. Download the software from the Alpine website and update the product using the USB flash drive.

- 1 Connect the USB flash drive which includes with the update software.**
- 2 Touch [Information] on the Setup menu screen.**
- 3 Touch [Firmware Upgrade].**
Software updating starts.

Updating this product

Check the Alpine website for details on updating.

<http://www.alpine.com.au>

Important information on the software

About the software license of the product

The software installed in the product contains open-source software. See the open source licenses at the end of the manual (page 49) for details on the open source software.

About the Supported Formats

About MP3/WMA/AAC/FLAC/WAV



CAUTION

Except for private use, duplicating audio data (including MP3/WMA/AAC/FLAC/WAV data) or distributing, transferring, or copying it, whether for free or for a fee, without permission of the copyright holder is strictly prohibited by the Copyright Act and by international treaty.

What is MP3?

MP3, whose official name is "MPEG Audio Layer 3," is a compression standard prescribed by the ISO, the International Standardisation Organisation and MPEG which is a joint activity institution of the IEC.

MP3 files contain compressed audio data. MP3 encoding is capable of compressing audio data at extremely high ratios, reducing the size of music files to as much as one-tenth their original size. This is achieved while still maintaining near CD quality. The MP3 format realizes such high compression ratios by eliminating the sounds that are either inaudible to the human ear or masked by other sounds.

What is WMA?

WMA, or "Windows Media™ Audio," is compressed audio data. WMA is similar to MP3 audio data.

What is AAC?

AAC is the abbreviation for "Advanced Audio Coding," and is a basic format of audio compression used by MPEG2 or MPEG4.

What is FLAC?

FLAC (Free Lossless Audio Codec) is an audio file codec for lossless compression, developed and offered as open source software.

Codecs with lossy compression forms, such as MP3 and AAC, reduce part of the data to improve compression efficiency. However, FLAC can reconstruct compressed data to be an identical copy of the original data by performing lossless compression. The compression ratio of FLAC is about 50%.

Method for creating MP3/WMA/AAC/FLAC/WAV (USB Flash drive) files

Audio data is compressed using software with MP3/WMA/AAC/FLAC/WAV (USB Flash drive) codecs. For details on creating MP3/WMA/AAC/FLAC/WAV (USB Flash drive) files, refer to the user's manual for that software.

MP3/WMA/AAC/FLAC/WAV (USB Flash drive) files that are playable on this device have the file extensions.

MP3: "mp3"

WMA: "wma"

AAC: "m4a"

FLAC: "flac"/"fla"

WAV: "wav"

WMA is not supported for the following files, Windows Media Audio Professional, Windows Media Audio 10 std or Windows Media Audio 10 Pro Lossless.

There are many different versions of the AAC format. Confirm that the software being used conforms to the acceptable formats listed above. It's possible that the format may be unplayable even though the extension is valid.

Playback of AAC files encoded by iTunes is supported.

Supported playback sampling rates and bit rates

MP3 (USB Flash drive)

Sampling rates: 8 kHz, 11.025 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz

Bit rates: 8 - 384 kbps

WMA (USB Flash drive)

Sampling rates: 8 - 48 kHz

Bit rates: 8 - 384 kbps

AAC (USB Flash drive)

Sampling rates: 8 - 48 kHz

Bit rates: 8 - 384 kbps

FLAC (USB Flash drive)

Sampling rates: 8 - 48 kHz

Bit rates: 8 - 384 kbps

WAV (USB Flash drive)

Sampling rates: 8 - 48 kHz

Bit rates: 64 - 1,536 kbps

This device may not play back correctly depending on sampling rates.

ID3 tags/WMA tags

This device supports ID3 tag v1.0, v1.1, v2.2, v2.3, v2.4, and WMA tag Ver.1.x. If tag data is in an MP3/WMA/AAC file, this device can display the title (track title), artist name, and album name ID3 tag/WMA tag data.

For non-supported characters, "*" is displayed.

The number of characters may be limited, or not correctly displayed, depending on the tag information.

Playing back MP3/WMA/AAC/FLAC/WAV

MP3/WMA/AAC files are prepared, then written to a USB flash drive.

- Maximum numbers of playable files/folders
USB Flash drive: 3,000 files/255 folders (including Root Folder)
- Largest playable file size: 512 MB

Playback may not be performed if a disc exceeds the limitations described above.

If a file/folder name is long, the maximum possible number of files may decrease.

Media supported

The media that this device can play back a USB flash drive.

Corresponding File Systems


This device supports FAT 16/32.

The maximum nested folder depth is 8 (including the root directory). File names are limited to 128 characters (including the extension).

Valid characters for folder/file names are letters A-Z (all caps), numbers 0-9, and '_' (underscore).

Order of files

Files are played back in the order that the writing software writes them to the disc. Therefore, the playback order may not be what's expected. Verify the writing order in the software's documentation. The playback order of the folders and files is as follows. (The following numbers may differ from actually displayed numbers.)

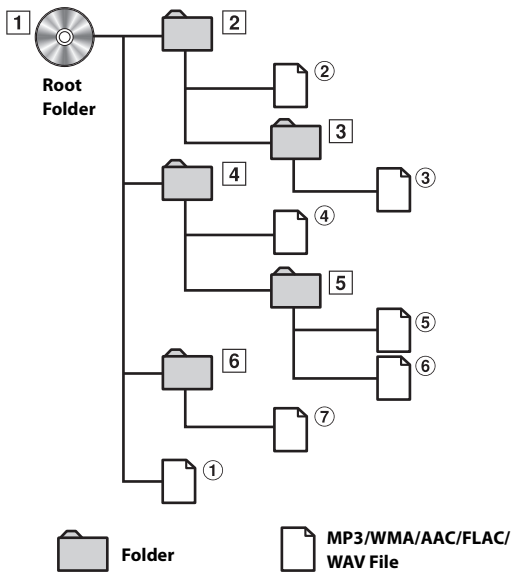

Terminology

Bit rate

This is the "sound" compression rate specified for encoding. The higher the bit rate, the higher the sound quality, but also the larger the files.

Sampling rate

This value shows how many times per second the data is sampled (recorded). For example, music CDs use a sampling rate of 44.1 kHz, so the sound is sampled (recorded) 44,100 times per second. The higher the sampling rate, the higher the sound quality, but also the larger the volume of data.

Encoding

Converting music CDs, WAVE (AIFF) files, and other sound files into the specified audio compression format.

Tag

Song information such as track titles, artist names, album names, etc., written into MP3/WMA/AAC/FLAC/WAV (USB flash drive) files.

Root folder

The root folder (or root directory) is found at the top of the file system. The root folder contains all folders and files. It is created automatically for all burned discs.

In Case of Difficulty

If you encounter a problem, please turn the power off, then on again. If the unit is still not functioning normally, please review the items in the following checklist. This guide will help you isolate the problem if the unit is at fault. Otherwise, make sure the rest of your system is properly connected, or then consult your authorized Alpine dealer.

Basic

No function or display.

- Vehicle's ignition is off.
 - If connected according to the instructions, the unit will not operate with the vehicle's ignition off.
- Improper power lead connections.
 - Check power lead connections.
- Blown fuse.
 - Check the fuse on the battery lead of the unit; replace with the proper value if necessary.

No sound or unnatural sound.

- Incorrect setting of volume/balance/fader controls.
 - Readjust the controls.
- Connections are not properly or securely made.
 - Check the connections and firmly connect.

Screen not displayed.

- Brightness/Contrast control is set at the minimum position.
 - Adjust the Brightness/Contrast control.
- Temperature in the vehicle is too low.
 - Increase the vehicle's interior temperature to operation temperature range.
- Connections to the Auxiliary Device are not securely made.
 - Check the connections and firmly connect.
- The Parking Brake Lead is not connected.
- The Parking Brake is not engaged.
 - Connect the Parking Brake Lead, then engage the Parking Brake.

Movement of displayed picture is abnormal.

- Temperature in the vehicle is too high.
 - Allow the vehicle's interior temperature to cool.

Radio

Unable to receive stations.

- No antenna, or open connection in the antenna cable.
 - Make sure the antenna is properly connected; replace the antenna or cable if necessary.

Unable to tune stations in the seek mode.

- You are in a weak signal area.
 - Change the radio frequency manually.
- If the area you are in is a primary signal area, the antenna may not be grounded and connected properly.
 - Check your antenna connections; make sure the antenna is properly grounded at its mounting location.
- The antenna may not be the proper length.
 - Make sure the antenna is fully extended; if broken, replace the antenna with a new one.

Broadcast is noisy.

- The antenna is not the proper length.
 - Extend the antenna fully; replace it if it is broken.
- The antenna is poorly grounded.
 - Make sure the antenna is grounded properly at its mounting location.
- The station signal is weak and noisy.
 - If above solution does not work, tune in another station.

USB Audio

Unit does not operate.

- Condensation.
 - Wait a while (about 1 hour) for the condensation to dry.

Picture is unclear or noisy.

- Vehicle's battery power is weak.
 - Check the battery power and wiring.
(The unit may malfunction if the battery power is under 11 volts with a load applied.)

If this Message Appears

Various messages are displayed on the screen during operation. In addition to the messages telling you the current status or providing guidance for the next operation, there are also the following error messages. If one of these error messages is displayed, carefully follow the instructions in the solution column.

System

For your safety, this function is only available while the vehicle is parked.

- A setup operation, etc., was carried out while the vehicle was running.
 - Move the vehicle to a safe location, stop, and engage the parking brake, then carry out this operation.

This device is not supported.

- A USB flash drive with a hub is connected.
 - You cannot play back from a USB flash drive with a hub. USB hub connections are also not supported.

Audio/Visual

This device is not supported.

- An iPhone that is not supported by the unit is connected.
 - Connect an iPhone that is supported by the unit.
- A USB device that is not supported by the unit is connected.
 - Attempt to connect another USB flash drive.
- Communication error.
 - Turn the ignition key off, and then set to ON again.
 - Check the display by reconnecting between the iPhone and the unit, using the iPhone cable.
 - Check the display by reconnecting between the USB flash drive and the unit.
- Caused by the iPod/iPhone Software Version not being compatible with this unit.
 - Update the iPhone Software Version to be compatible with this unit.
- The iPhone is not verified.
 - Change to another iPhone.

Please check the connection status.

- Communication error.
 - Check the display by reconnecting between the iPhone and the unit, using the iPhone cable.

No Artist (/ No Song / No album)

- There are no data in the iPhone.
 - Download data to the iPhone and connect to the unit.
- There are no tag-info in the USB Audio / iPod Audio.

No Files

- There are no data in the USB flash drive.
 - Download data to the USB flash drive and connect to this unit.
-

Bluetooth

No Bluetooth device connected

- The Bluetooth audio device was not connected correctly.
 - Check the settings for the unit and the Bluetooth audio device and reconnect.
-

Specifications

MONITOR SECTION

Screen Size	7"
LCD Type	Transparent type TN LCD
Operation System	TFT active matrix
Number of Picture Elements	1,152,000 pcs. (800 × 480 × 3 (RGB))
Effective Number of Picture Elements	99% or more
Illumination System	LED

FM TUNER SECTION

Tuning Range	87.5 – 108.0 MHz
Mono Usable Sensitivity	9.3 dBf (0.8 μV/75 ohms)
50 dB Quieting Sensitivity	13.5 dBf (1.3 μV/75 ohms)
Alternate Channel Selectivity	80 dB
Signal-to-Noise Ratio	65 dB
Stereo Separation	35 dB
Capture Ratio	2.0 dB

AM TUNER SECTION

Tuning Range	531 – 1,602 kHz
Usable Sensitivity	25.1 μV/28 dBf

USB SECTION

USB requirements	USB 2.0
Max. Power Consumption	1,000 mA (CDP Support)
USB Class	USB (Play From Device)/ USB (Mass Storage Class)
File System	FAT16/32
Number of Channels	2-Channels (Stereo)
Frequency Response*1	5 – 20,000 Hz (±1 dB)
Total Harmonic Distortion	0.008% (at 1 kHz)
Dynamic Range	95 dB (at 1 kHz)
Signal-to-Noise Ratio	100 dB
Channel Separation	85 dB (at 1 kHz)

*1 Frequency response may differ depending on the encoder software/bit rate.

Bluetooth SECTION

Bluetooth Specification	Bluetooth V4.2
Output Power	+4 dBm Ave. (Power class 2)
Profile	HFP (Hands-Free Profile) PBAP (Phone Book Access Profile) A2DP (Advanced Audio Distribution Profile) AVRCP (Audio/Video Remote Control Profile)

GENERAL

Power Requirement	14.4 V DC (11–16 V allowable)
Operating temperature	-20°C to + 60°C
Power Output	16 W RMS × 4*2
*2 Primary amplifier ratings per CEA-2006 Standard	
• Power output: measured at 4 Ohms and ≤ 1% THD+N	
• S/N: 80 dBA (reference: 1 W into 4 Ohms)	
Weight	0.92 kg
Audio output level	
Preout (Front, Rear):	4V/10k ohms (max.)
Preout (Subwoofer):	4V/10k ohms (max.)

CHASSIS SIZE

Width	178 mm
Height	100 mm
Depth	60 mm

- Due to continuous product improvement, specifications and design are subject to change without notice.
- The LCD panel is manufactured using an extremely high precision manufacturing technology. Its effective pixel ratio is over 99.99%. This means that there is a possibility that 0.01% of the pixels could be either always ON or OFF.

Installation and Connections

Before installing or connecting the unit, please read the following and pages 7 to 12 of this manual thoroughly for proper use.

WARNING

KEEP SMALL OBJECTS SUCH AS SCREWS OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

MAKE THE CORRECT CONNECTIONS.

Failure to make the proper connections may result in fire or product damage.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.

Failure to do so may result in electric shock or injury due to electrical shorts.

DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS.

Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, gear lever, brake pedals, etc. can be extremely hazardous.

DO NOT SPLICE INTO ELECTRICAL CABLES.

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

DO NOT INSTALL IN LOCATIONS WHICH MIGHT HINDER VEHICLE OPERATION, SUCH AS THE STEERING WHEEL OR GEARSHIFT.

Doing so may obstruct forward vision or hamper movement etc. and results in serious accident.

CAUTION

HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.

DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

Precautions

- Be sure to disconnect the cable from the (-) battery post before installing your unit. This will reduce any chance of damage to the unit in case of a short-circuit.
- Be sure to connect the color coded leads according to the diagram. Incorrect connections may cause the unit to malfunction or damage to the vehicle's electrical system.
- When making connections to the vehicle's electrical system, be aware of the factory installed components (e.g. on-board computer). Do not tap into these leads to provide power for this unit. When connecting the unit to the fuse box, make sure the fuse for the intended circuit of the unit has the appropriate amperage. When in doubt, consult your Alpine dealer.
- The unit uses female RCA-type jacks for connection to other units (e.g. amplifier) having RCA connectors. You may need an adaptor to connect other units. If so, please contact your authorized Alpine dealer for assistance.
- Be sure to connect the speaker (-) leads to the speaker (-) terminal. Never connect left and right channel speaker cables to each other or to the vehicle body.


Accessory List

Main unit.....	1
Power cable.....	1
USB extension cable.....	1
PRE OUT cable.....	1
Microphone.....	1
Owner's Manual.....	1 set

Installation

Caution


- Do not block the unit's fan, thus preventing air circulation. If blocked, heat will accumulate inside the unit and may cause a fire.

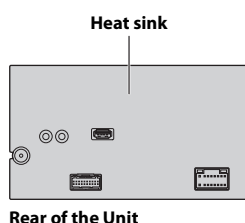

Caution concerning the installation location

Angle of installation

Install at an angle between horizontal and 30°. Note that installing at an angle outside of this range will result in a loss of performance and possibly damage.

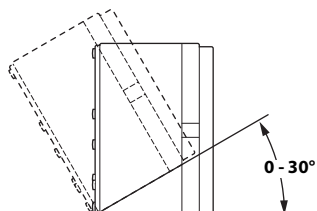


Mounting the Microphone

For safe use, make sure of the following:


- Location is stable and firm.
- Does not interfere with safety equipment.
- Driver's view and operations are not obstructed.
- Microphone is located where the driver's voice can be easily picked up (for example, on the sun visor).

When you speak into the microphone, you should not have to change your driving posture. This may cause a distraction, taking your attention away from safely driving your vehicle. Carefully consider direction and distance while mounting the microphone. Confirm that the driver's voice can be easily picked up at the selected location.

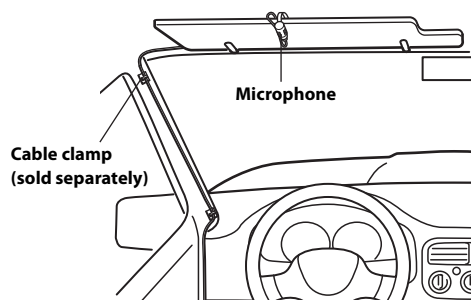

Installation example using the Original Mounting Bracket

- Mount the original mounting bracket to the unit using the supplied screws.

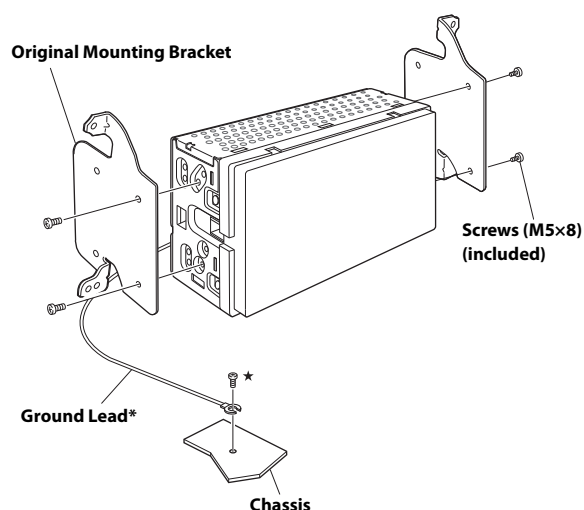

- Connect all other leads of the unit according to details described in the "Connections" (page 43).


- Mount the unit in a car.

* To securely connect the ground lead, use an already installed screw on a metal part of the vehicle (marked (★)) or a clean, bare metal spot on the vehicle's chassis.

- Fix the cables carefully. Do not damage them by mounting them into movable parts, such as the seat rail, or by locating them against sharp or pointed edges.

- Reattach the removed vehicle parts (panels, etc.) or other aftermarket dash kit back onto the vehicle.


Connections

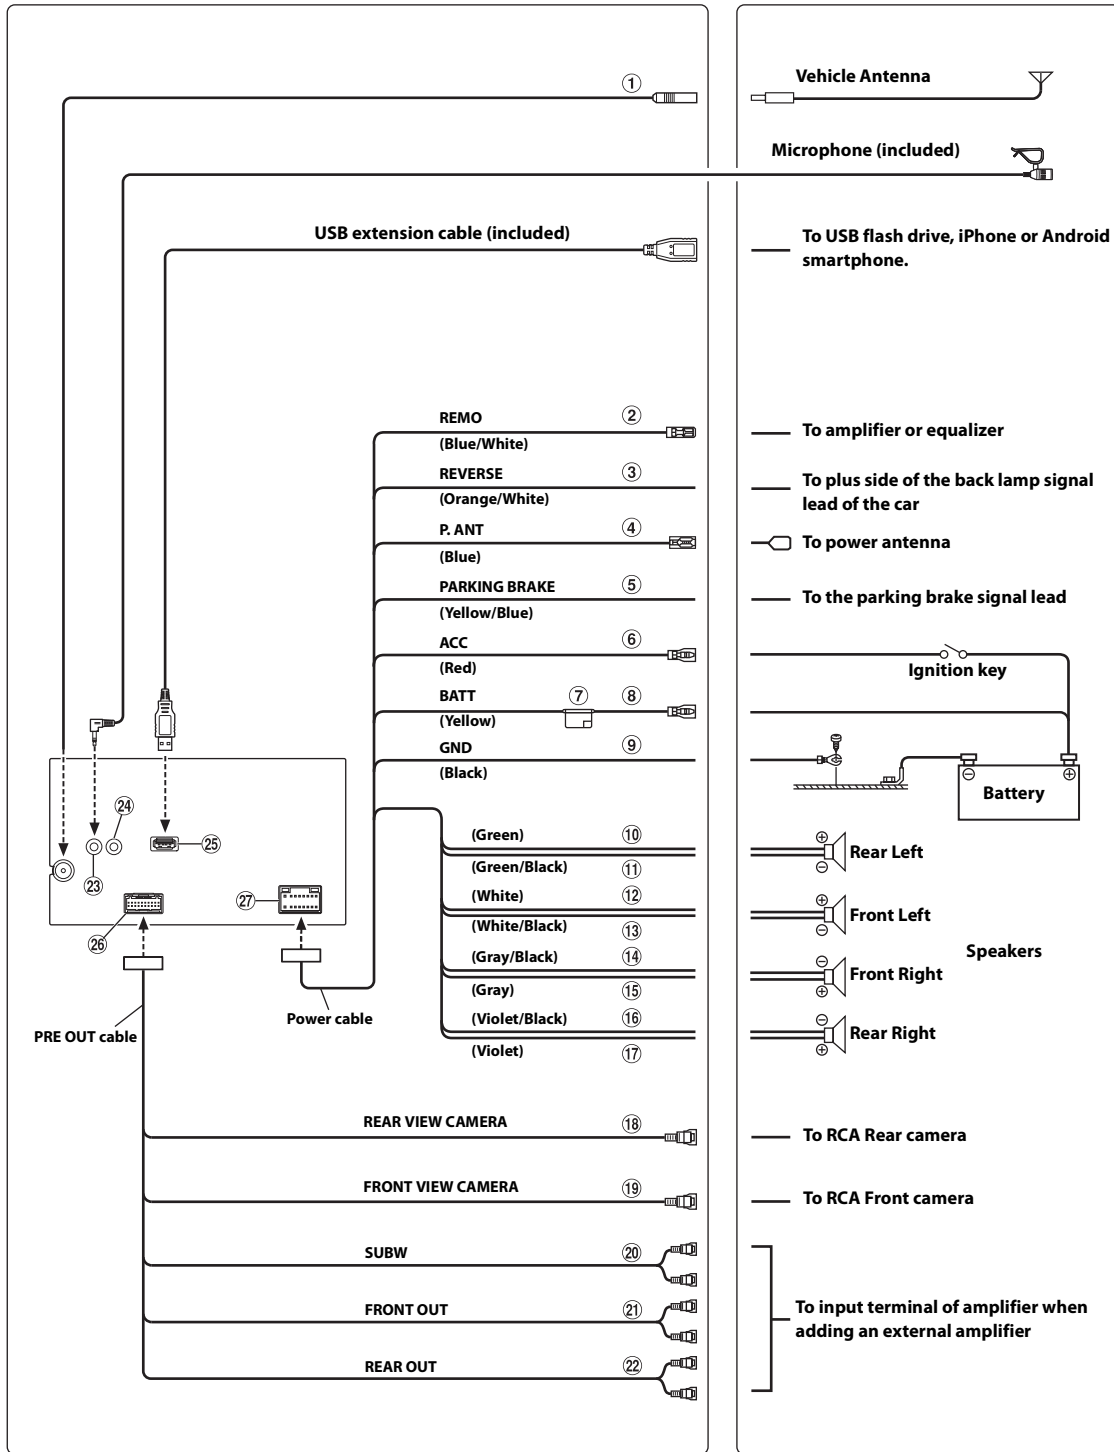

- ① **Radio Antenna Receptacle**
- ② **Remote Turn-On Lead (Blue/White)**
Connect this lead to the remote turn-on lead of your amplifier or signal processor.
- ③ **Reverse Lead (Orange/White)**
- ④ **Power Antenna Lead (Blue)**
Connect this lead to the +B terminal of your power antenna, if applicable.
 - *This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.*
- ⑤ **Parking Brake Lead (Yellow/Blue)**
Connect this lead to the power supply side of parking brake switch to transmit the parking brake status signals to the unit.
- ⑥ **Switched Power Lead (Ignition) (Red)**
Connect this lead to an open terminal on the vehicle's fuse box or another unused power source that provides (+) 12V only when the ignition is turned on or in the accessory position.
- ⑦ **Fuse Holder (15A)**
- ⑧ **Battery Lead (Yellow)**
Connect this lead to the positive (+) post of the vehicle's battery.
- ⑨ **Ground Lead (Black)**
Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.
- ⑩ **Left Rear (+) Speaker Output Lead (Green)**
- ⑪ **Left Rear (-) Speaker Output Lead (Green/Black)**
- ⑫ **Left Front (+) Speaker Output Lead (White)**
- ⑬ **Left Front (-) Speaker Output Lead (White/Black)**
- ⑭ **Right Front (-) Speaker Output Lead (Gray/Black)**
- ⑮ **Right Front (+) Speaker Output Lead (Gray)**
- ⑯ **Right Rear (-) Speaker Output Lead (Violet/Black)**
- ⑰ **Right Rear (+) Speaker Output Lead (Violet)**
- ⑱ **REAR CAMERA Input RCA Connector**
Use when connecting a rear camera with RCA Output Connector.
- ⑲ **FRONT CAMER Input RCA Connector**
Use when connecting a front camera with RCA Output Connector.
- ⑳ **Subwoofer RCA Connectors**
- ㉑ **Front Output RCA Connectors**
Can be used as Front Output RCA Connectors. RED is right and WHITE is left.
- ㉒ **Rear Output RCA Connectors**
Can be used as Rear Output RCA Connectors. RED is right and WHITE is left.
- ㉓ **MIC Input Connector**
To microphone (included)
- ㉔ **Steering Remote Control Interface Connector**
To steering remote control interface.
For details about connections, consult your nearest Alpine dealer.
- ㉕ **USB Connector**
To USB flash drive, iPhone or Android smartphone.
- ㉖ **CAMERA/PRE OUT Connector**
- ㉗ **Power Supply Connector**

If an ACC power supply is not available

Connection Diagram of SPST Switch (sold separately)

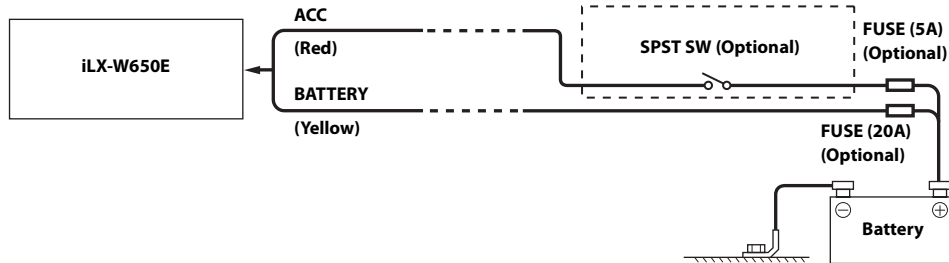

- If your vehicle has no ACC power supply, add an SPST (single-pole, single-throw) switch (sold separately) and fuse (sold separately).
- The diagram and the fuse amperage shown above are in the case when the unit is used individually.
- If the switched power (ignition) lead of the unit is connected directly to the positive (+) post of the vehicle's battery, the unit draws some current (several hundred milliamperes) even when its switch is placed in the OFF position, and the battery may be discharged.

IMPORTANT

Please record the serial number of your unit in the space provided below and keep it as a permanent record. The serial number plate is located on the bottom of the unit.


SERIAL NUMBER: _____
 INSTALLATION DATE: _____
 INSTALLATION TECHNICIAN: _____
 PLACE OF PURCHASE: _____

To prevent external noise from entering the audio system.

- Locate the unit and route the leads at least 10 cm away from the car harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint, dirt or grease if necessary) of the car chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.


System Example

Connection of an iPhone

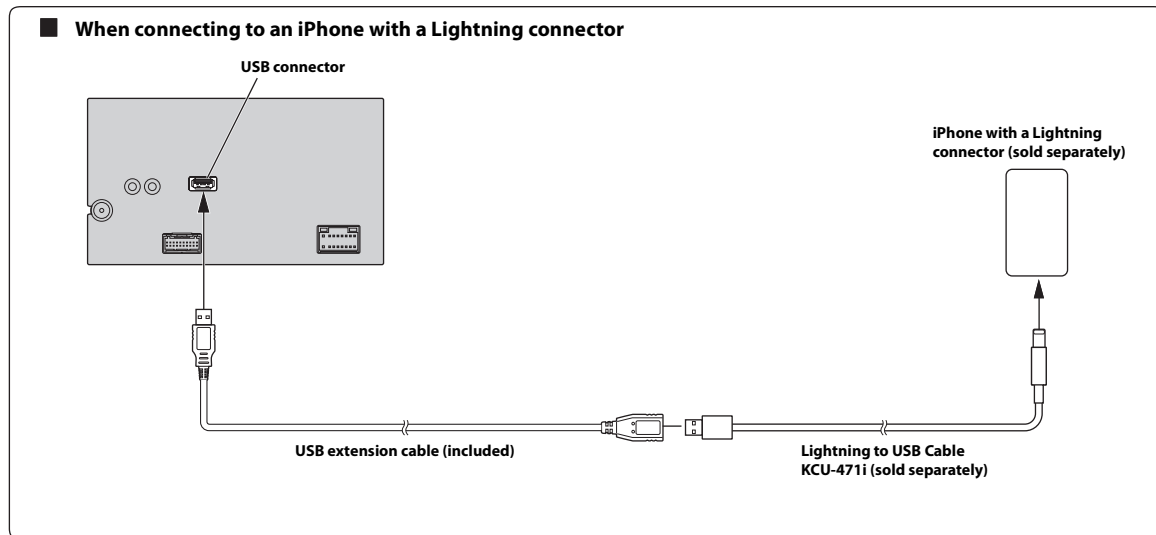


- Do not leave an iPhone in a vehicle for a long time. Heat and humidity may damage the iPhone, and you may not be able to play it again.

Connection of a USB Flash Drive

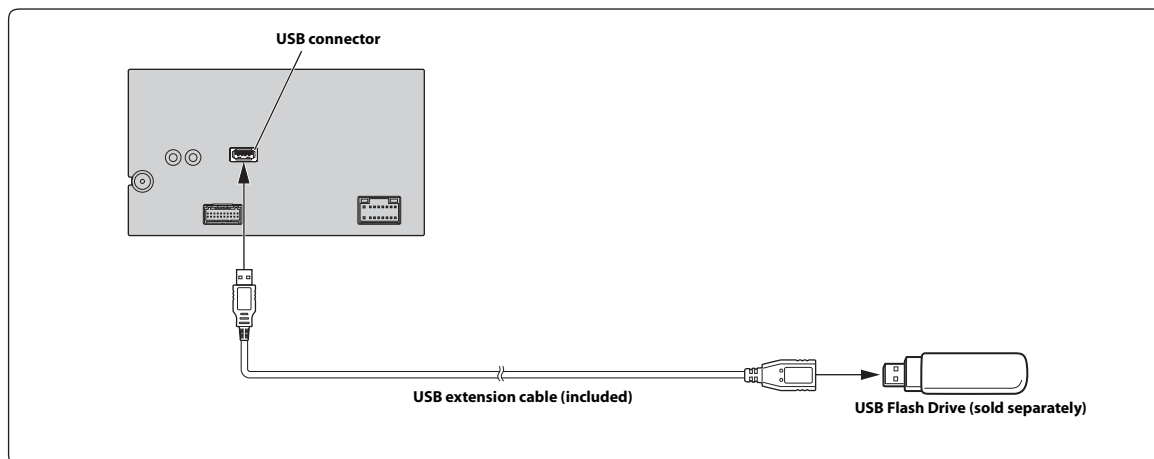

- Do not leave a flash drive in a vehicle for a long time. Heat and humidity may damage the flash drive.

Connection of an External Amplifier

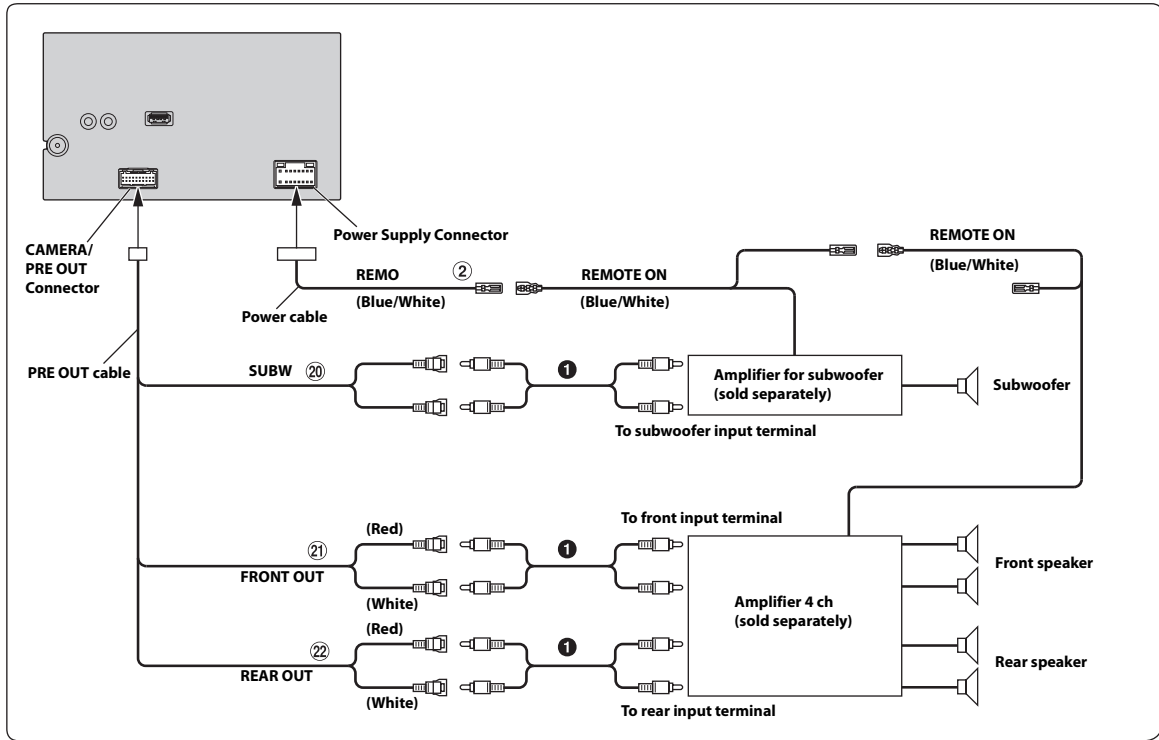

② Remote Turn-On Lead (Blue/White)


① RCA Extension Cable (sold separately)

②⑩ Subwoofer RCA Connectors

②⑪ Front Output RCA Connectors

②⑫ Rear Output RCA Connectors

Connection of a Rearview camera

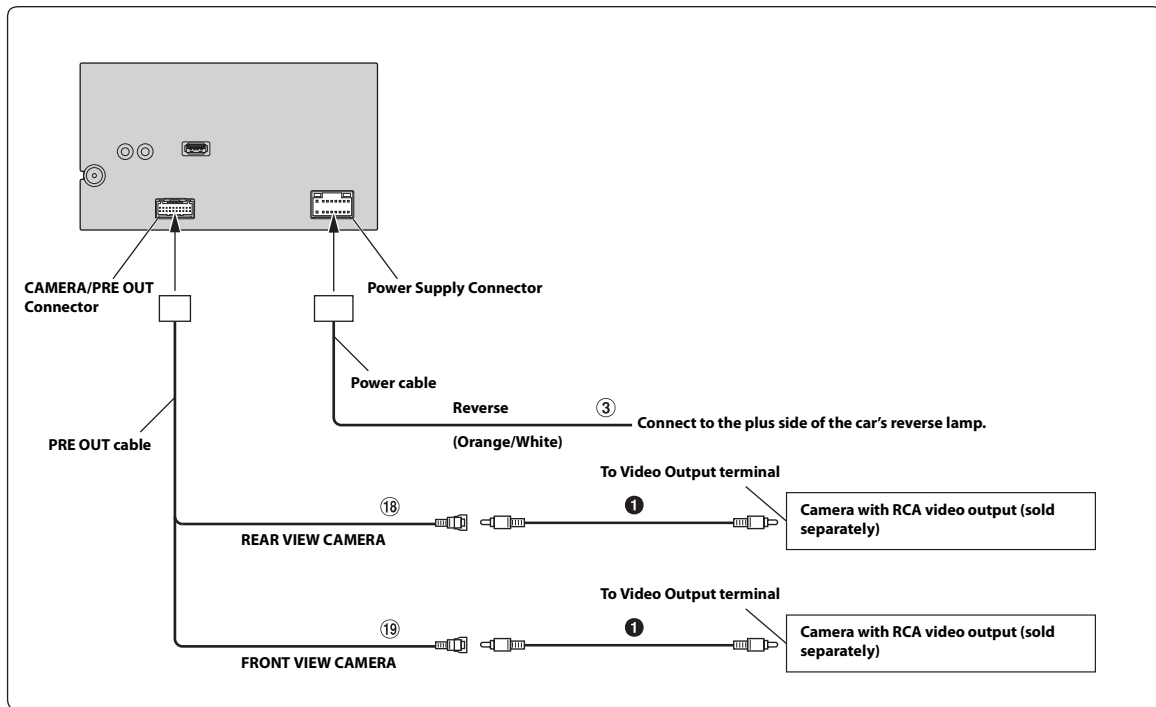

③ Reverse Lead (Orange/White)

❶ RCA Extension Cable (sold separately)

❷ REAR CAMERA Input RCA Connector

❸ FRONT CAMERA Input RCA Connector

- Set the Camera Primary or Secondary setting to [Rear]. For details, refer to "Camera Primary and Secondary Setting" (page 19).

Open source licenses

● lw IP

Copyright (c) 2001, 2002 Swedish Institute of Computer Science.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This file is part of the lwIP TCP/IP stack.

Author: Adam Dunkels <adam@sics.se>

● OpenSSL

LICENSE ISSUES

The OpenSSL toolkit stays under a double license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit. See below for the actual license texts.

OpenSSL License

Copyright (c) 1998-2018 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment:
"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment:
"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OPENSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young
(ey@cryptsoft.com).

This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (ey@cryptsoft.com)
All rights reserved.

This package is an SSL implementation written by Eric Young (ey@cryptsoft.com).
The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed.

If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used.

This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:
"This product includes cryptographic software written by Eric Young
(ey@cryptsoft.com)"
The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement:
"This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publicly available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

● Unrarlib

Free License for Unique RAR File Library

Copyright (C) 2000-2002 by Christian Scheurer (www.ChristianScheurer.ch)
UNIX port by Johannes Winkelmann (jw@tk56.net)

You have the permission to use, copy, modify, and distribute the Unique RAR File Library (also called URARFileLib or unrarlib) and its documentation for any purpose except for re-creating the RAR compression algorithm, which is proprietary. URARFileLib may not be used or modified to create RAR/WinRAR compatible archives, only decompression is permitted.

If you use URARFileLib, or parts of URARFileLib in your program, you must give the program away for free.

The above copyright notice must be shipped with all copies.

No representations are made about the suitability of the URARFileLib for any purpose. It is provided "as is" without expressed or implied warranty.

Christian Scheurer (cs@unrarlib.org)

14. June 2002

● zlib

zlib.h -- interface of the 'zlib' general purpose compression library
version 1.2.11, January 15th, 2017

Copyright (C) 1995-2017 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

Jean-loup Gailly Mark Adler
jloup@gzip.org madler@alumni.caltech.edu

